(I) PIONEER

036

Service 7 Manual

REPAIR & ADJUSTMENTS



ORDER NO. ARP-922-0

COMPACT DISC PLAYER

3010(BK) PD-6010

MODEL PD-6010 COMES IN FOUR VERSIONS DISTINGUISHED AS FOLLOWS.

	Applicable model		D			
Туре	PD-6010[BK]	PD-6010	Power requirement	Destination		
KU	0	_	AC120V only	U.S.A.		
кс	0	_	AC120V only	Canada		
HEM	0	0	AC220V	European continent		
НВ	0	0	AC240V	United Kingdom		

- This service manual is applicable to the PD-6010/KU, KC, HEM and HB types.
- ◆ As to the KC, HEM and HB types please refer to pages 86 87.
- As to the circuit and mechanism descriptions, please refer to the PD-9010X service manual (ARP-883).
- Ce manual d'instruction se refére au mode de réglage, en français.
- Este manual de servicio trata del método de ajuste escrito en español.

CONTENTS

1.	SAFETY INFORMATION	2	8.	PACKING	39
2.	SPECIFICATIONS	4	9.	ELECTRICAL PARTS LIST	40
3.	PANEL FACILITIES	5	10.	TROUBLESHOOTING	43
4.	PARTS LOCATIONS	8	11.	ADJUSTMENT	53
5.	DISASSEMBLY1	0		RÉGLAGE	64
6.	EXPLODED VIEWS AND PARTS LIST 1	4		AJUSTE	75
7.	SCHEMATIC DIAGRAM AND P.C. BOARD		12.	FOR KC, HEM and HB TYPES	86
	PATTERNS 2	1			

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.

TEL: (800) 421-1404, (800) 237-0424

PIONEER ELECTRONIC [EUROPE] N.V. Keetberglaan 1, 2740 Beveren, Belgium TEL: 03/775-28-08

PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia

TEL: [03] 580-9911

1. SAFETY INFORMATION


-(FOR MODEL KU ONLY)-

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

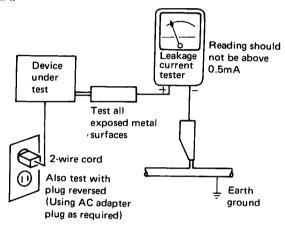

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUT-LINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a \triangle on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

·(FOR MODEL HEM & HB ONLY) -

VAROITUS! -

LAITE SISÄLTÄÄ LASERDIODIN, JOKA LÄHETTÄÄ NÄKYMÄTÖNTÄ, SILMILLE VAARALLISTA INFRAPUNASÄTEILYÄ LAITTEEN SISÄLLÄ ON LASERDIODIN LÄHEISYYDESSÄ KUVAN 1. MUKAINEN VAROITUSMERKKI.



LASER Kuva 1 Lasersateilyn varoitusmerkki

TION THE TO

WARNING!

DEVICE INCLUDES LASER DIODE WHICH EMITS INVISIBLE INFRARED RADIATION WHICH IS DANGEROUS TO EYES. THERE IS A WARNING SIGN ACCORDING TO PICTURE 1 INSIDE THE DEVICE CLOSE TO THE LASER DIODE.



LASER
Picture 1
Warning sign for laser radiation

-IMPORTANT

PIONEER COMPACT DISC PLAYER APPARATUS CONTAINS LASER OF HIGHER CLASS THAN 1. ALL OPERATION OF THE APPARATUS SHOULD BE DONE BY A SPECIALLY INSTRUCTED PERSON.

ADVERSEL: -

USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION UNDGÅ UDSAETTELSE FOR STRÅLING.

QUE	STIONN.	AIRE
-----	---------	-------------

MODEL

One Model per questionnaire

-	_		
Dear	Se	rvice	er.

Thank you for your cooperation in the post-sale service of Pioneer products.

This questionnaire is used as a tool to improve the serviceability of our products and service manuals. Please evaluate this model and service manual by answering the following questions. Your ideas may be realized in our future products. Your answers will be appreciated. Thank you.

PIONEER ELECTRONIC CORP.

T. Nakagawa, Manager, Service Section, International Division


Circle applicable number:	Goo	od	Fair		Poor
	1	2	3	*4	*5
	1				
	1	2	3	*4	*5
			~		
	1				
	1	2	3	*4	*5
					*-
	1	2	3	⁺ 4	*5
	Circle applicable number:	1	1 2	1 2 3 1 2 3	1 2 3 *4 1 2 3 *4 1 2 3 *4

^{*} If (4) or (5) was circled, please be specific.

e. Your advice, opinion or ideas related to servicing this product.						
2. SERVICE MANUAL EVALUATION						
a. Circuit & Mechanism Description						
b. Circuit Diagram						
3. OTHER						
Please describe other areas of servicing which you may find difficult.						
Completed by :	Date :					
Company Name:	Date:					
Address:						
City/State/Zip:						

Please send this form filled to the distributor in your country.

LABEL CHECK

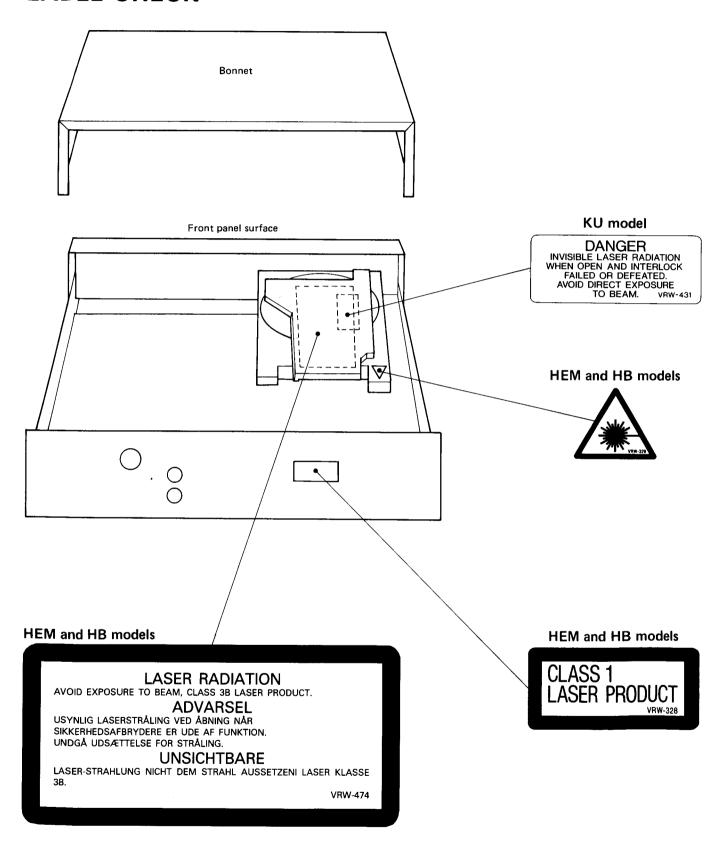



2. SPECIFICATIONS

1. General
Type Compact disc digital audio system
Usable discs Diameter 120 mm
Thickness 1.2 mm
Maximum playing time: 60 minutes or more (stereo)
Linear speed: 1.2 ~ 1.4 m/sec
Rotation direction (signal side): Counterclockwise
Signal format Sampling frequency: 44.1 kHz
Sampling bit number: 16 bit linear
Transmission bit rate: 4.3218 Mbit/sec.
Modulation system: EFM
•
Error correction system: CIRC
Preemphasis: 50/15 µsec (during use)
Laser used Semiconductor laser: wavelength 780 nm
Power requirements
HEM model AC 220V, 50, 60 Hz
HB model AC 240V, 50, 60 Hz
KU, KC models AC120V, 60 Hz
Power consumption
HEM, HB models 17 W
KU, KC models16 W
Operating temperature $+5^{\circ}$ C $\sim +35^{\circ}$ C
Weight 4.8 kg (10 lb 9 oz)
External dimensions 420(W) x 310(D) x 91(H)mm
$16-1/2(W) \times 12-1/5(D) \times 3-3/5(H)$ in


2. Audio section Frequency response $2 \text{ Hz} \sim 20 \text{ kHz} \pm 0.5 \text{ dB}$ S/N 96 dB (1 kHz) Dynamic range 95 dB (1 kHz) Channel separation 93 dB (1 kHz) Wow and flutter Quartz oscillator accuracy Total harmonic distortion 0.002% (1 kHz, 0 dB) Total harmonic distortion and noise
Output voltage 2 Vrms (1 kHz, 0 dB)
Channels 2-channel (stereo)
3. Functions
Play Pause
Manual search Track search
All-track repeat Initial play from selected
 Programmed playback track
Programmed repeat
* The above functions can be controlled via remote control.
4. Accessories
Remote control unit
• Batteries (AAA/R03)
Pin-plug audio cable
• Operating Instructions

NOTE:

Specifications and design subject to possible modification without notice, due to improvements.

3. PANEL FACILITIES

REAR PANEL

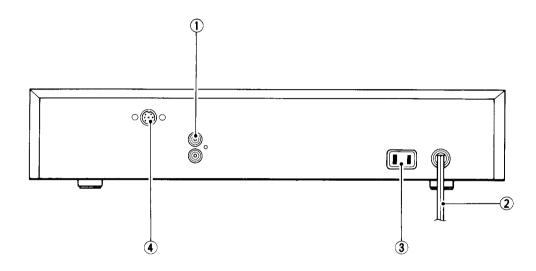

- 1) AUDIO OUT terminals
- 2 Power cord
- ③ AC OUTLET (UNSWITCHED, MAX. 100W) [Only U.S.A. model is provided with this outlet. Other models are not provided with this outlet.]
- Power is continuously supplied to the component connected here, regardless of the setting of the power switch (ON/OFF). Turn the connected component ON/OFF by using its own power switch.
- Do not connect any component having a power consumption exceeding 100W.

NOTE:


- Never connect any appliance (toaster, hair dryer, etc.) whose power consumption exceeds the wattage (W) noted on the outlet panel. Damage to components or fire hazards could result.
- Even if a television set has a rated power consumption less than the permissible outlet wattage, when its power is first turned on it may have a temporary electrical current flow that exceeds the permissible value. For this reason, do not connect television sets or monitors to this outlet.

4) SUBCODE OUT terminal

This terminal will be used for outputting subcodes (data recordable on compact discs together with audio signals) in future audio applications.

FRONT PANEL

REMOTE CONTROL UNIT

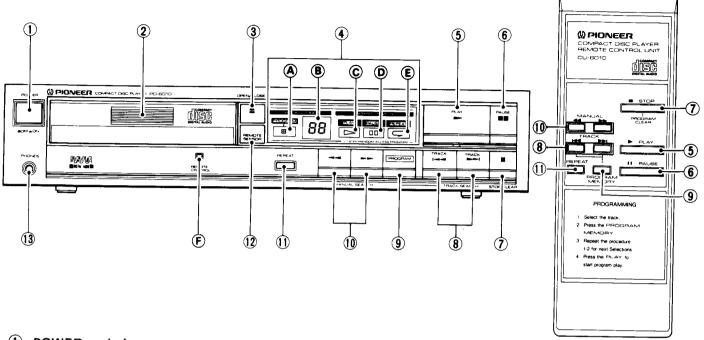

1 POWER switch

Press to turn power to the unit ON and OFF.

② Disc tray

Compact discs are loaded here. When the power is turned on and the OPEN/CLOSE switch is pressed, the disc tray opens toward the front. To close the tray, either press the OPEN/ CLOSE switch again, or push the tray in manually.

3 OPEN/CLOSE switch

Press to open or close the disc tray. The disc tray alternately opens and closes each time the switch is pressed.

(4) Indicators

A PROGRAM: Lights after tracks are programmed.

B TRACK : Indicates the number of the track currently playing or being pro-

grammed.

© PLAY : Lights during playback.

PAUSE : Lights during the pause mode (play-

back has been temporarily inter-

rupted).

E REPEAT : Lights during repeat play.

F REMOTE CONTROL:

: Lights when a command signal is received from the remote control unit.

⑤ PLAY key

Press to begin playback, and to release the player from the pause mode.

6 PAUSE key

Press to temporarily interrupt playback. When pressed again, the player is released from the pause mode.

STOP/CLEAR key

Press to stop playback. When pressed, all operations stop. Also, when the player is in the stop mode, press this key to cancel memorized contents of programmed play.

8 TRACK SEARCH keys

When the player is in the normal play or programmed play modes, or during the pause mode, these keys are pressed to perform search for a desired track. When pressed, the disc will be advanced to the next track, or reversed to the previous track.

: When pressed once, the disc playback advances to the beginning of the next track; when pressed continuously, the disc playback moves to the beginning of succeeding tracks on the disc (during programmed playback, it moves to the beginning of the next programmed track).

[: When pressed once, the disc playback returns to the beginning of the currently playing track; when pressed continuously, the disc playback moves further in reverse to the beginning of previous tracks on the disc (during programmed playback, it returns to the beginning of the previously programmed track).

9 PROGRAM key (PROGRAM MEMORY)

Use to memorize desired programs for programmed playback. Press this key after selecting a desired track with the track search key. Tracks will be memorized in the order the keys are pressed.

10 MANUAL SEARCH keys

These keys are pressed to perform fast forward and fast reverse when the player is in the play or pause mode. The function operates only during the time the keys are held depressed; if the keys are held depressed for three seconds or more, the speed increases.

[>>]: Fast forward is performed (if end of disc is reached, player enters the pause mode).

[: Fast reverse is performed (if beginning of disc is reached, player enters the pause mode).

During programmed play, the player will enter the pause mode just before moving to the next (or previous) track.

(1) REPEAT key

Press to perform repeat playback.

- When pressed during the normal playback mode, all tracks on the disc will be played back repeatedly.
- During programmed playback, the programmed tracks will be played back repeatedly in the programmed order.

(12) REMOTE CONTROL SIGNAL RECEIVER (REMOTE SENSOR)

(13) PHONES terminal

When using headphones, connect their plug here.

Player operations and corresponding indicator displays

	Indic			
Operating mode	TRACK	Other	Comments	
Power ON Disc tray OPEN	0 0		After OP display, 00.	
Disc tray CLOSE	Total number of tracks		Displayed for 4 seconds only, thereafter same as "Stop" mode.	
Stop mode	0 1		4 seconds after TOC is read. At end of play- back, when STOP/CLEAR key is pressed.	
Playback mode (Play, Program, Repeat) Pause mode	Currently playing track no.	 During playback, PLAY lights; during pause, PAUSE lights. During programmed or repeat playback, PLAY or PAUSE lights. Depending on play mode, PROGRAM or REPEAT lights. 		

4. PARTS LOCATIONS


NOTES

- The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks ★★ and ★.


** GENERALLY MOVES FASTER THAN *

This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.


Front Panel View

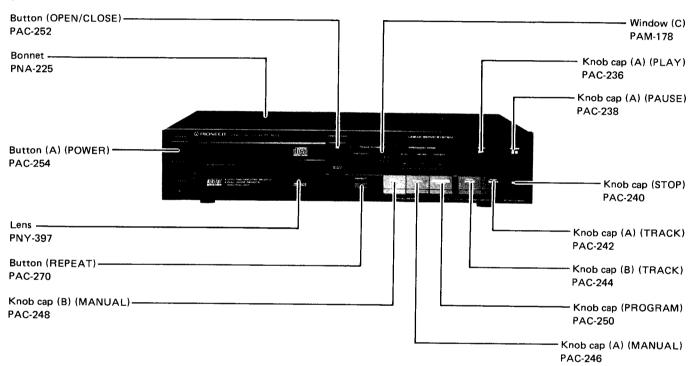


Front View with Front Panel Removed

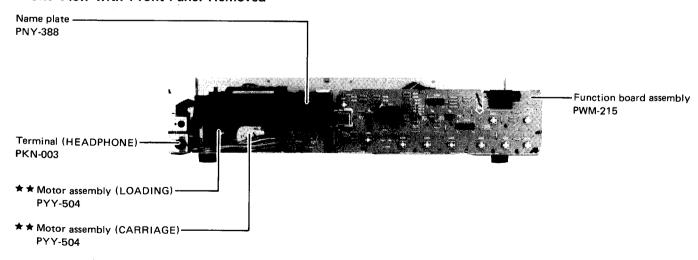


Rear Panel View

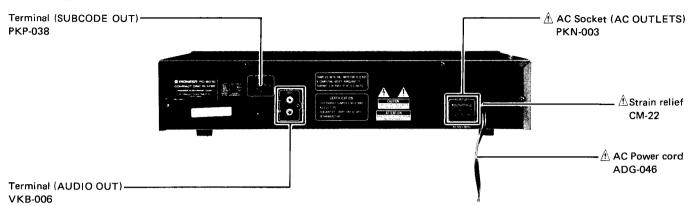


Top View

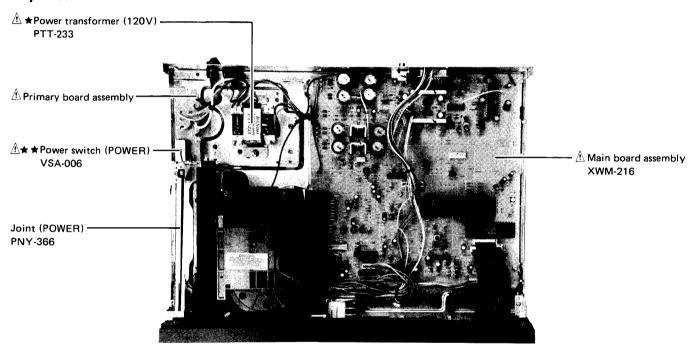

Side View

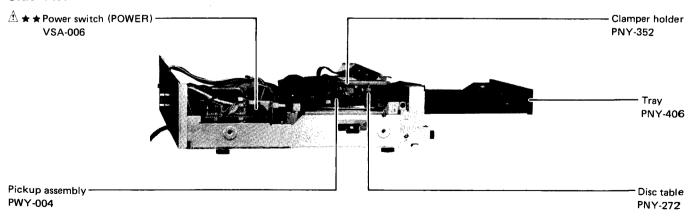

5. DISASSEMBLY

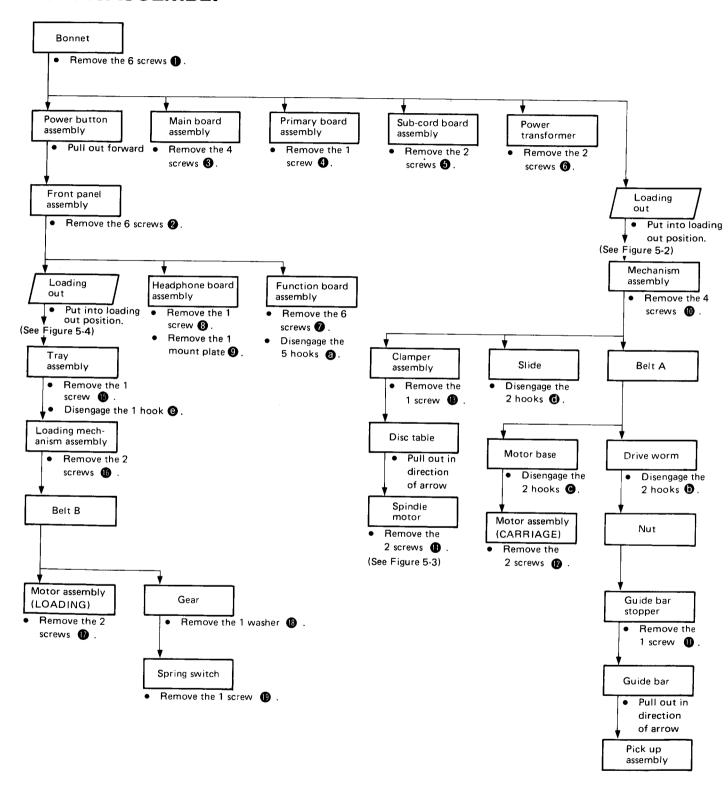

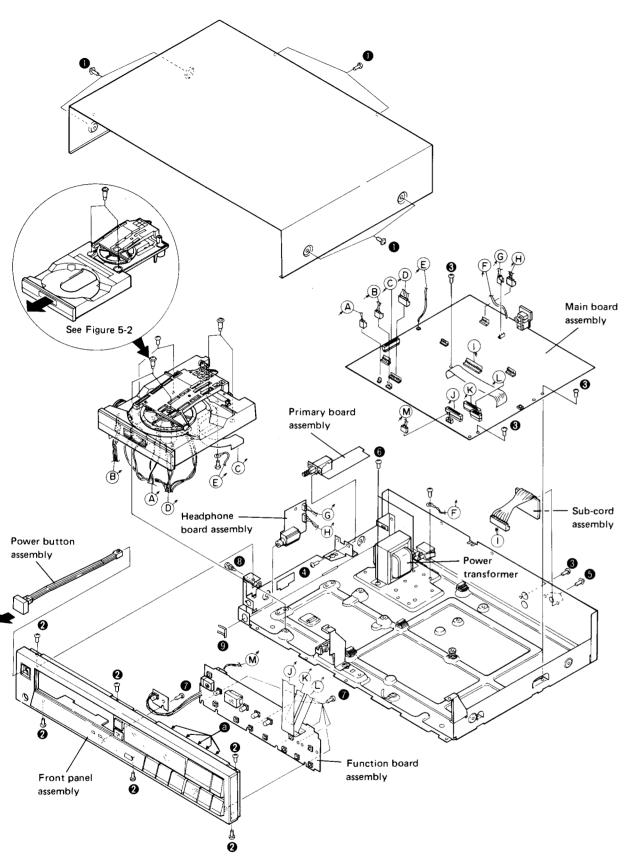


Fig. 5-1 Disassembly

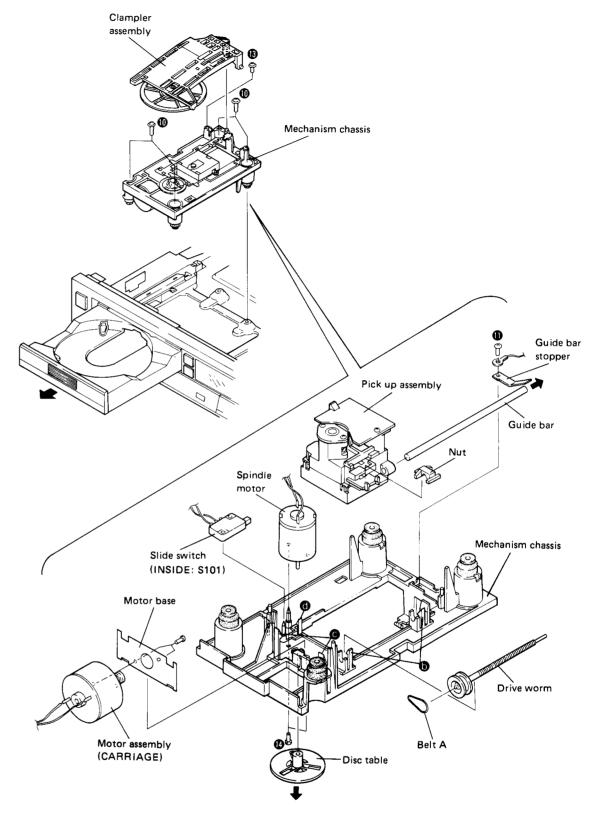


Fig. 5-2 Disassembly

Disctable A

When the sertion, alw below the s hexagonal w tween the d shown in Fi rectly above.

NOTE:

φ4mm her wrench se

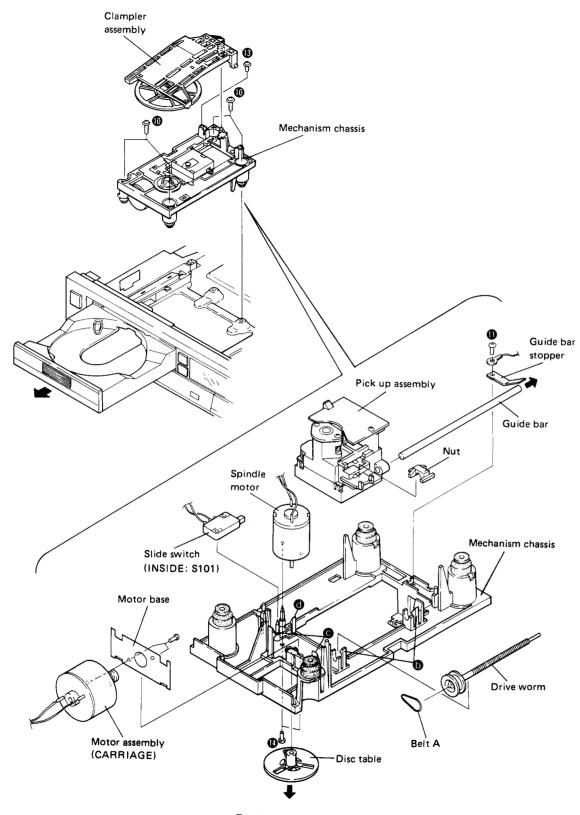



Fig. 5-2 Disassembly


• Disctable Assembly Procedures

When the disc table is remounted by pressure insertion, always make contact with the stopper below the spindle motor, insert a spacer (ϕ 4mm hexagonal wrench. etc.) to ensure that the gap between the disk table and mechanism chassis is as shown in Figure 5-3, and apply pressure from directly above. (Pressure of approx. 9kg.)


NOTE:


\$\phi4\text{mm}\$ hexagonal wrench is included hexagonal wrench set. (No. GGH-003).

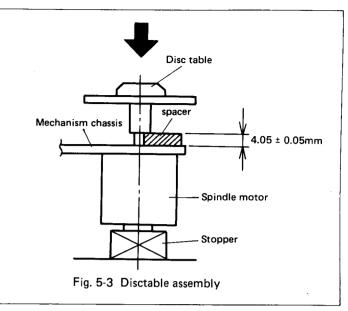

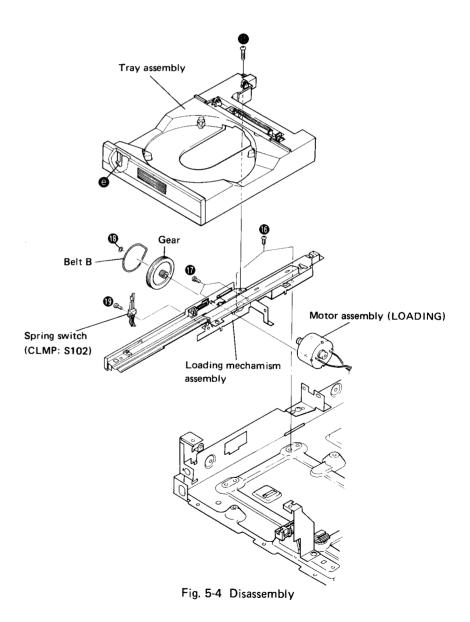

Sub-cord assembly

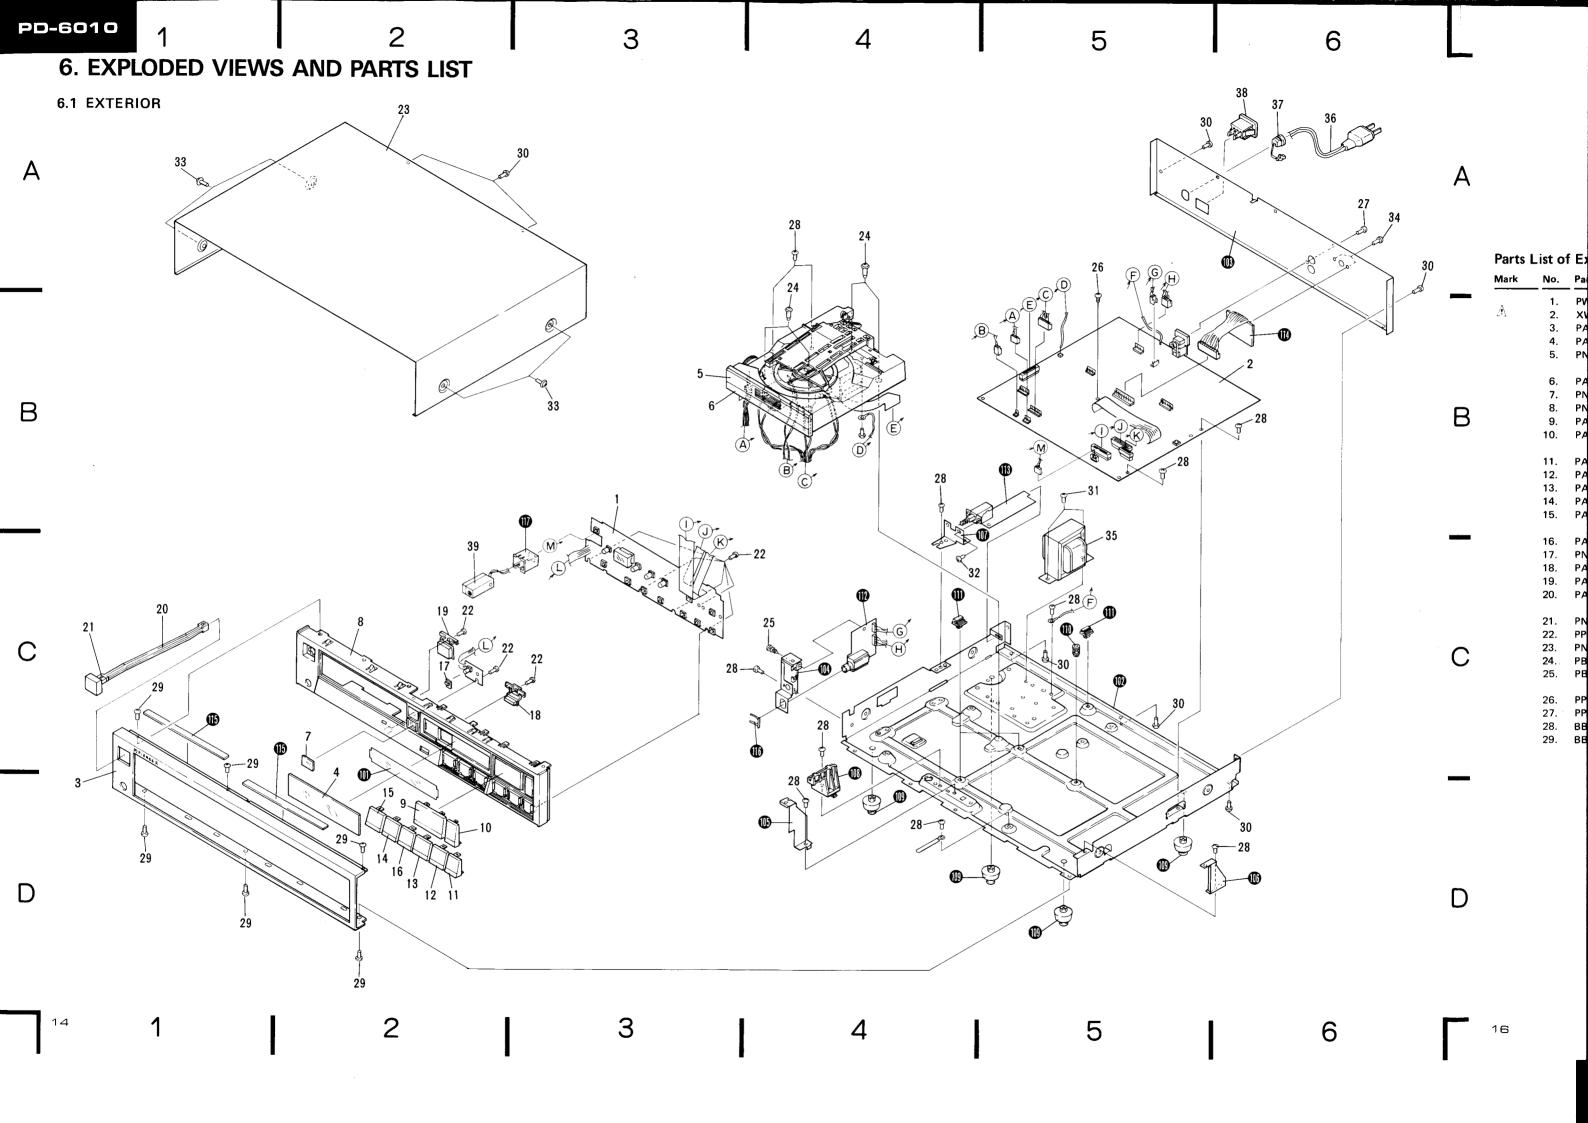

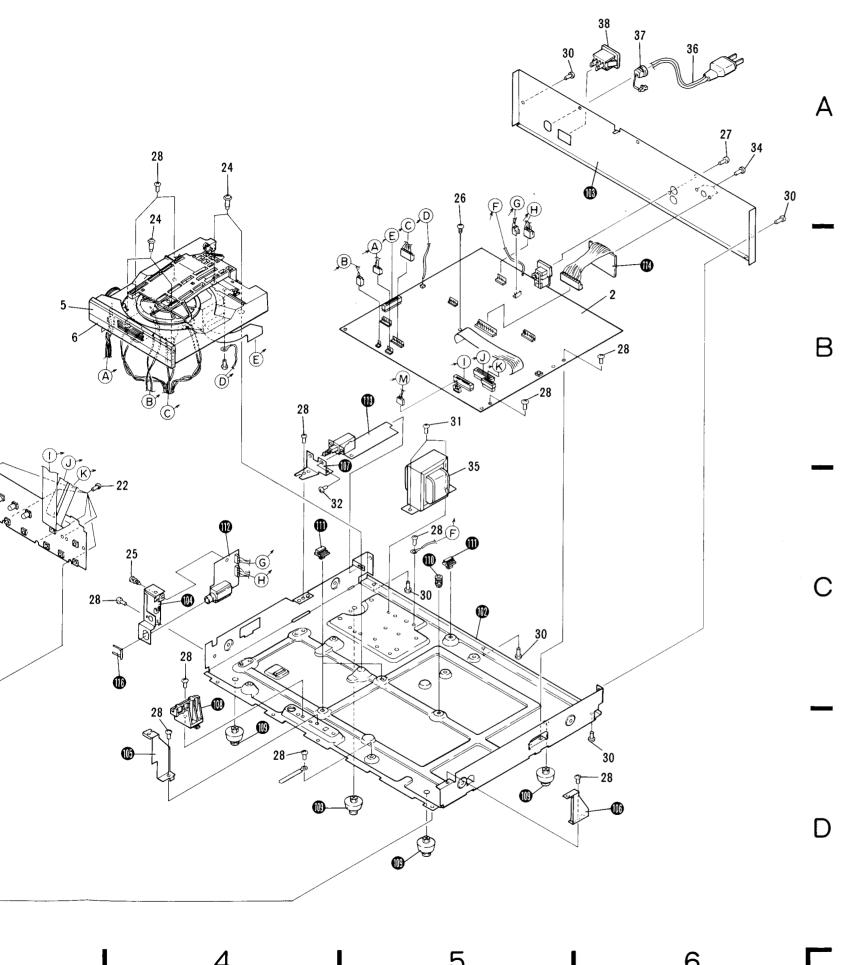

5


NOTES:

- Parts without part number cannot be supplied.
 The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks ★ and ★.
 ★★ GENERALLY MOVES FASTER THAN ★
 This classification shall be adjusted by each distributor because it depends on model

number, temperature, humidity, etc.

Parts List of Exterior


Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1.	PWM-215	Function board assembly		30.	BBZ30P060FZK	Screw
A	2.	XWM-216	Main board assembly		31.	BBZ40P060FMC	Screw
	3.	PAN-097	Front panel (D)		32.	PMZ30P060FMC	Screw
	4.	PAM-178	Window (C)		33.	FBT40P080FZK	Screw
	5.	PNY-388	Name plate		34.	PPZ26P060FZK	Screw
	6.	PAN-079	Plate		★ 35.	PTT-233	Power Transformer (120V)
	7.	PNY-368	Filter		36.	PDG-046	AC Power cord
	8.	PNY-450	Function panel (D)	<u>:</u>	37.	CM-22	Strain relief
	9.	PAC-236	Knob cap (A) (PLAY)	2.	38.	PKN-003	AC Socket (AC OUTLETS)
	10.	PAC-238	Knob cap (A) (PAUSE)		39.	PWX-096	Remote control reception
	11.	PAC-240	Knob cap (STOP)		101.		Display plate
	12.	PAC-242	Knob cap (A) (TRACK)		102.		Base
	13.	PAC-244	Knob cap (B) (TRACK)		103.		Rear base
	14.	PAC-246	Knob cap (A) (MANUAL)		104.		Front angle (A)
	15.	PAC-248	Knob cap (B) (MANUAL)		105.		Front angle (B)
	16.	PAC-250	Knob cap (PROGRAM)		106.		Front angle (C)
	17.	PNY-397	Lens		107.		Switch angle
	18.	PAC-270	Button (REPEAT)		108.		Slide guide
	19.	PAC-252	Button (OPEN/CLOSE)		109.		Foot
	20.	PAC-254	Button (A) (POWER)		110.		P.C.B. spacer
	21.	PNY-366	Joint (POWER)		111.		P. C. board holder
	22.	PPZ30P080FMC	Screw		112.		Headphone board assembly
	23.	PNA-225	Bonnet		113.		Primary board assembly
	24.	PBA-182	Screw		114.		Sub cord board assembly
	25.	PBM-012	Plastic rivet		115.		Abosrber
	26.	PPZ30P150FMC	Screw		116.		Mount plate
	27.	PPZ30P080FZK	Screw		117.		Holder
	28.	BBZ30P060FMC	Screw				
	29.	BBZ30P080FZK	Screw				

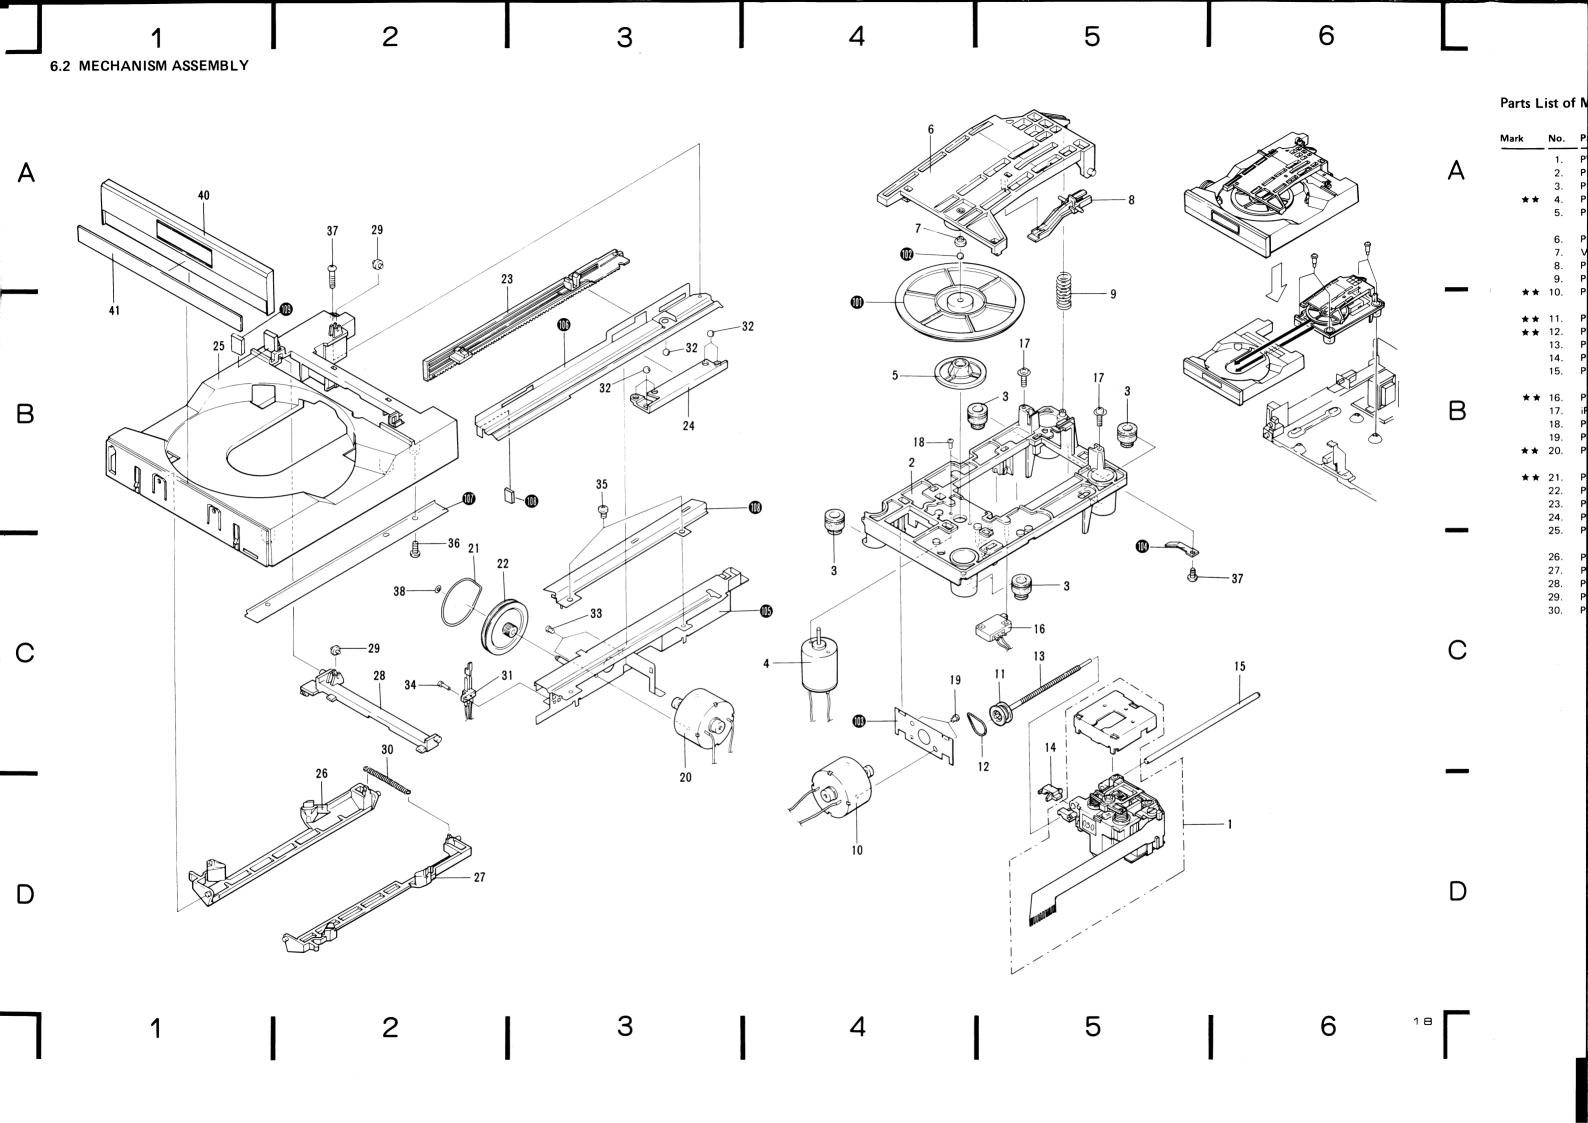

Parts List of Mechanism Assembly


Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
47	1.	PWY-004	Pickup assembly	**	31.	PSN-003	Spring switch (CLMP: S102)
	2.	PNY-271	Mechanism chassis		32.	PBP-001	Steel ball 4ϕ
	3.	PEB-293	Floating rubber		33.	PMZ26P040FMC	Screw
**	4.	PXM-147	Spindle motor		34.	PMZ20P060FMC	Screw
	5.	PNY-272	Disc table		35.	BBZ30P060FMC	Screw
	6.	PNY-352	Clamper holder		36.	PPZ30P080FMC	Screw
	7.	VNL-268	Receptacle		37.		
	8.	PNY-354	Clamper lever		38.	WT25D047D025	Washer
	9.	PBH-422	Clamper spring		39.	BBZ30P080FZK	Screw
1 ★★	10.	PYY-504	Motor assembly (CARRIAGE)		40.	PNY-388	Name plate [Black]
						PNY-403	Name plate [Silver]
**	11.	PNX-449	Motor pulley				
**	12.	PEB-294	Belt		41.	PAN-079	Plate
	13.	PLB-271	Drive worm				
	14.	PNY-355	Nut		101.		Clamper
	15.	PLB-272	Guide bar		102.		Steel ball
					103.		Motor base
**	16.	PSH-007	Slide switch (INSIDE: S101)		104.		Guide bar stopper
	17.	iPZ30P080FMC	Screw		105.		Loading base unit
	18.	PMZ20P040FMC	Screw				
	19.	PMZ26P040FMC	Screw		106.		Slide base
**	20.	PYY-504	Motor assembly (LOADING)-		107.		Slide plate
					108.		Stop rubber
**	21.	PEB-297	Belt		109.		Cushion (2.5)
	22.	PNY-379	Gear				
	23.	PNY-380	Rack				
	24.	PNY-381	Retainer				
	25.	PNY-406	Tray				
	26.	PNY-383	Disc lever (L)				
	27.	PNY-384	Disc lever (R)				
	28.	PNY-385	Drive lever				
	29.	PNY-386	Roller				
	30.	PBH-423	Disc lever spring				


6.3 REMOTE CONTROL UNIT (PWW-003)

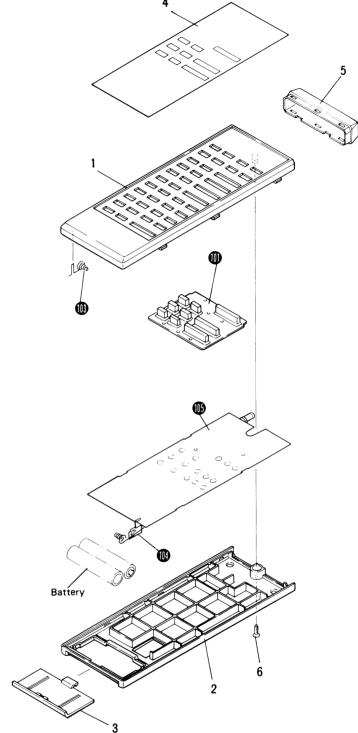

Parts List of Remote Control Unit

Mark	No.	Part No.	Description	Mark No. Part No.	Description
	1.	PNY-434	Case (A)	101.	Rubber sheet
	2.	PNY-435	Case (B)	102.	
	3.	VNK-548	Cover	103.	Spring
	4.	PAN-108	Plate	104.	Spring
	5.	PNY-436	Filter	105.	P.C. board
	6.	CRZ20P080FZK	Screw		

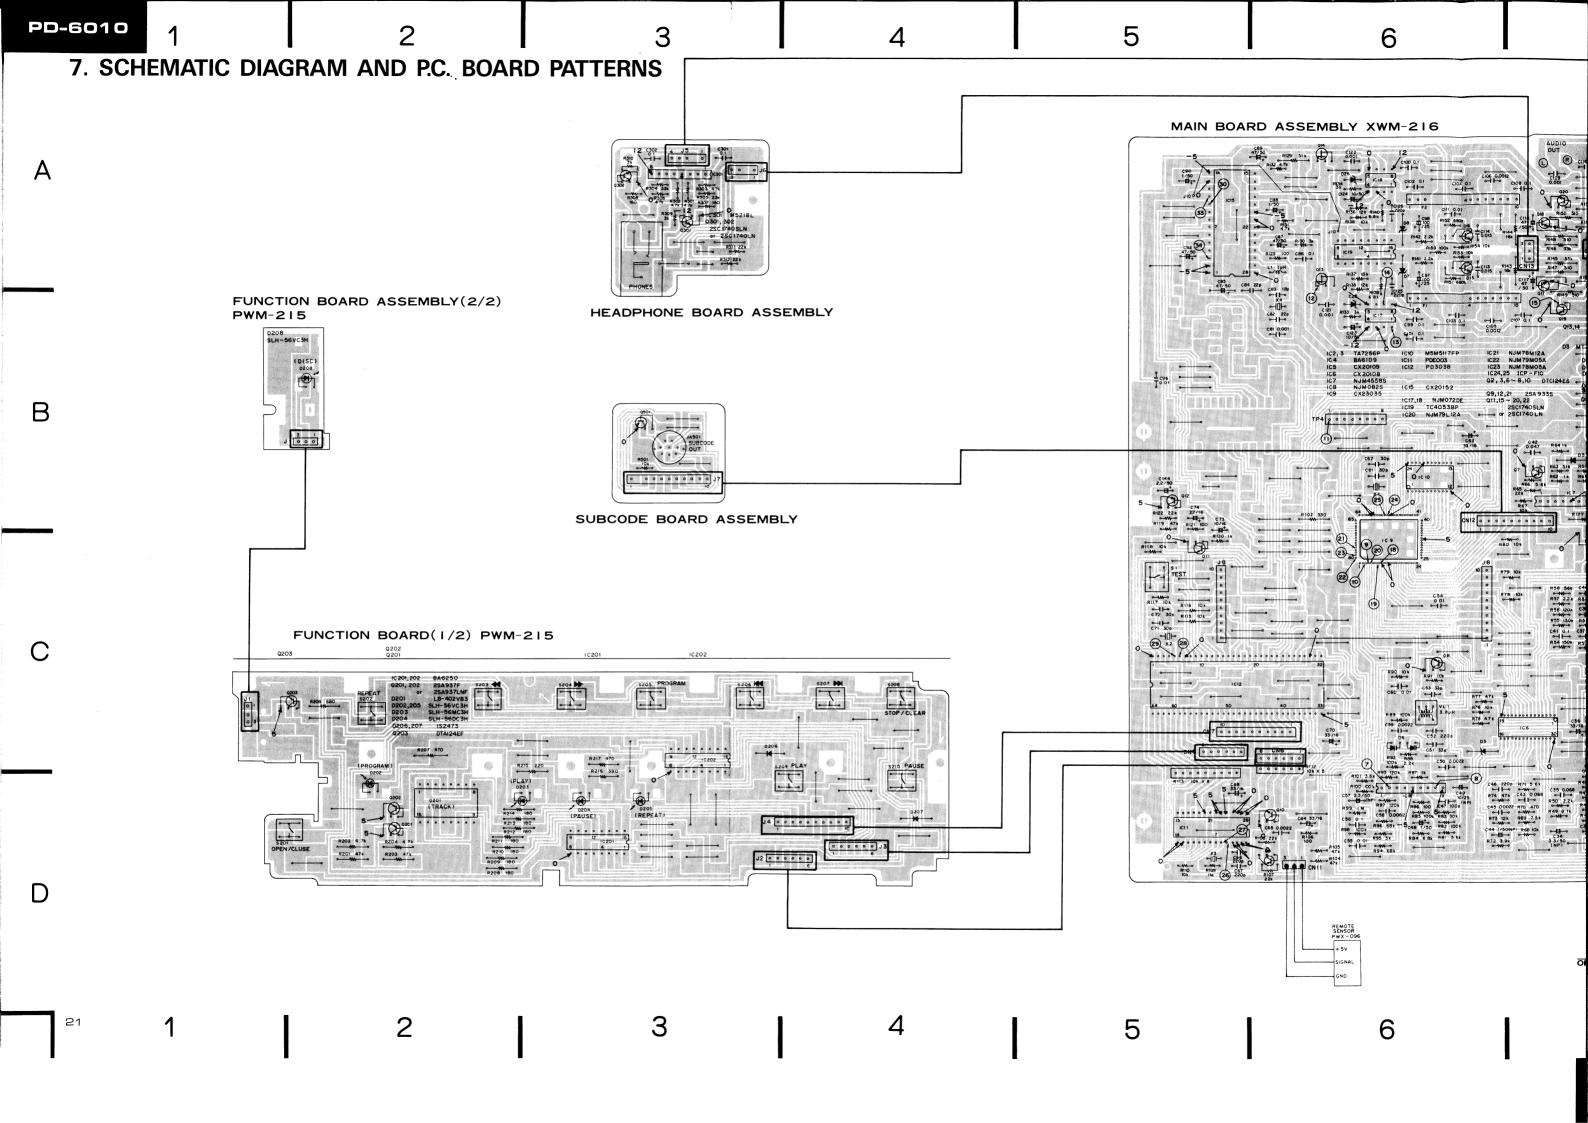

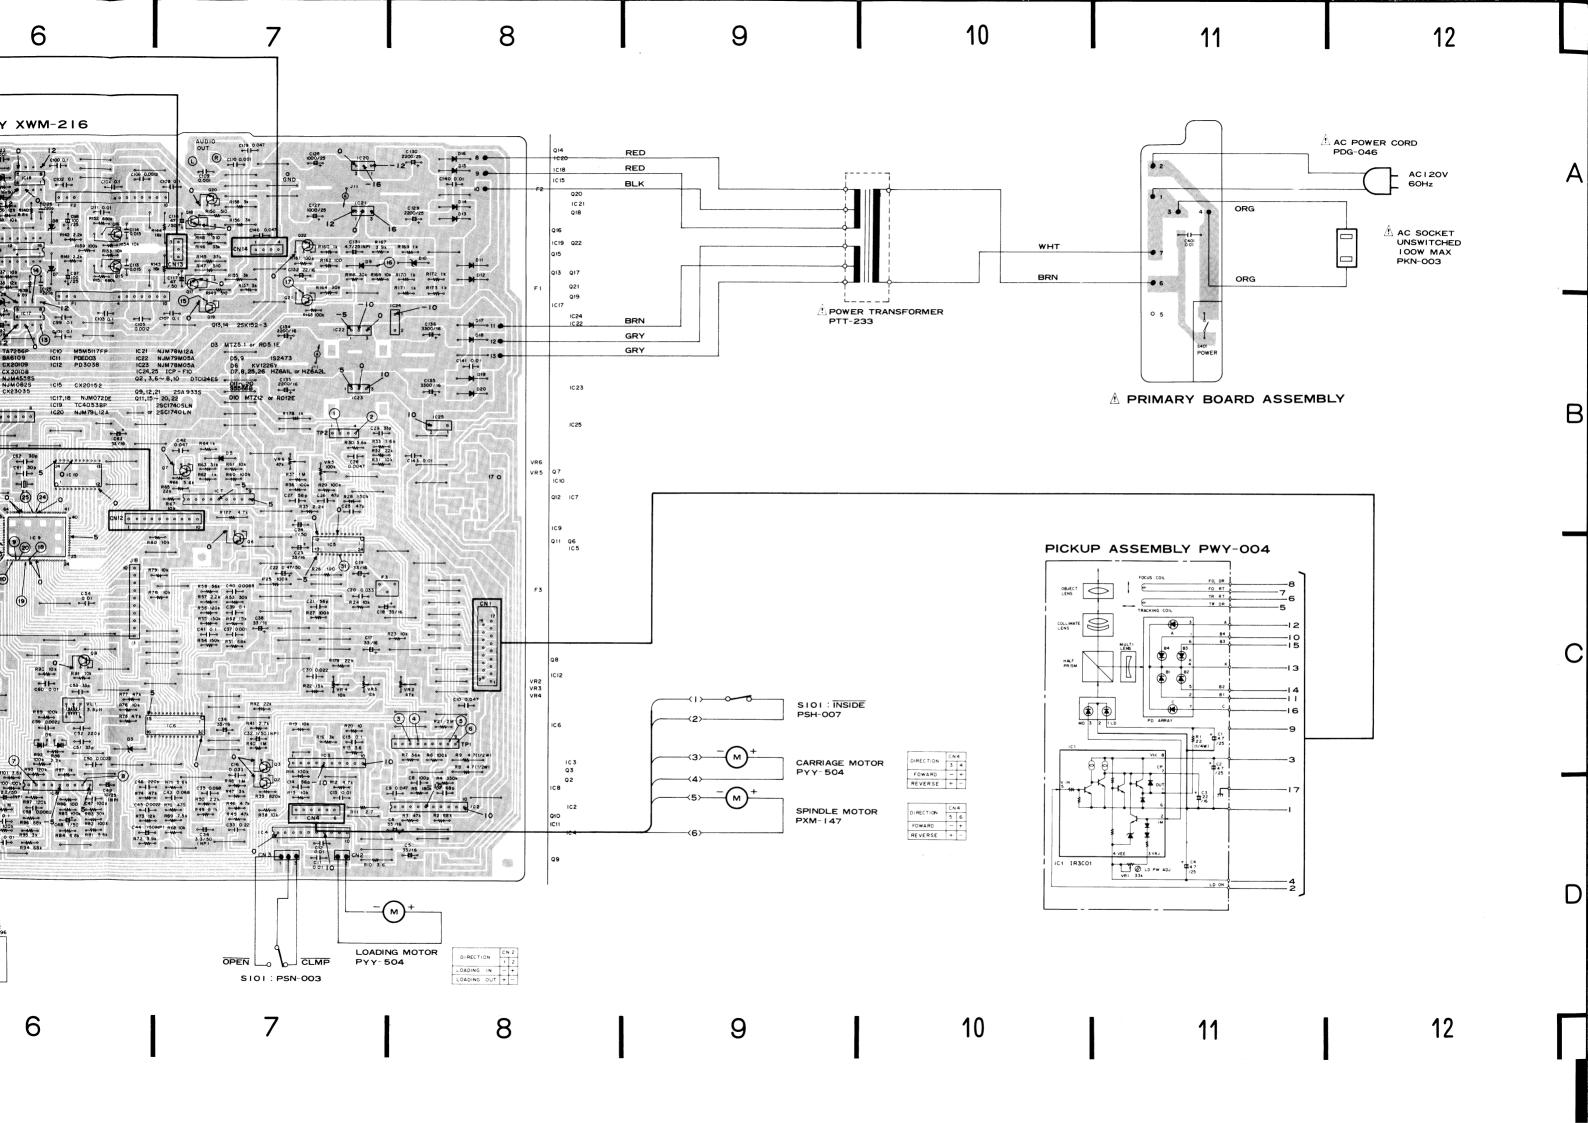

7.2 SCHEMATIC DIAGRAM

NOTE:

1. RESISTORS.

Indicated in Ω , ¼W, ½, W,±5% tolerance unless otherwise noted k; k Ω , M; M Ω , (F); ±1%, (G); ±2%, (K); +10%, (M); ±20% tolerance

2. CAPACITORS:

Indicated in capacity (μF)/voltage (V) unless otherwise noted p; pF. Indication without voltage is 50V except electrolytic capaci-

3. VOLTAGE

DC voltage (V) at no input signal

4. OTHERS:

; Signal route.
; Adjusting point.

The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

* marked capacitors and resistors have parts numbers.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

The waveforms at each measuring point indicated by the encircled numbers are given on pages 34 thru 37.

SWITCHES:

MAIN BOARD ASSEMBLY

S1 : TEST

FUNCTION BOARD ASSEMBLY

S201 : OPEN/CLOSE

S202 : REPEAT

S204: ▶► (MANUAL SEARCH)

S205 : PROGRAM

S206 : ₩ (TRACK SEARCH)

S207: ► (TRACK SEARCH)

S208 : STOP / CLEAR

S209 : PLAY S210 : PAUSE

PRIMARY BOARD ASSEMBLY

S401 : POWER ON - OFF

OUTSIDE OF P.C. BOARD ASSEMBLY

SIO1 : INSIDE

S102 : CLAMP

CLAMP - OPEN

The underlined indicates the switch position.

	Focus servo loop line
	Signal route
and a second and a second control of the sec	Tracking serve loop time
المعاملات المعامل المعاملات والمرافق المائين (1977 - المعامل المعاملات	Carriage servo line
	Loading motor route
	Spindle motor route
•	Measurement point

• List of Symbols

Symbol	Signal Source	Signal Name	Function	
Α			Tracking signal lead code detector	
A0~A10	IC9-38~48	Address line		
APCG	IC1-6	APC GND		
B1~B4			Output from 1/4 divider detectors used to detect RF and focus signals	
BCLK	IC9-76	Bit clock		
С			Tracking signal end code detector	
C•OUT	IC6-6	Counter out	Track count signal pulse	
C1 F1	IC9-62	Error flag		
C1F2	IC9-63	Error flag		
C2F1	IC9-64	Error flag	Flags indicating when decoder LSI is correcting errors	
C2F2	IC9-65	Error flag		
CA·DR	IC3-2	Carriage drive	Carriage motor drive output	
CLK	IC12-27	Clock	IC6 and IC9 control data (serial) clock	
CLMP	S102	Clamp	Disc tray status (L: closed, H: open or moving)	
CRCF	IC9-20		Sub-code Q error detection result output (synchronized with SCOR signal)	
cs	IC9-50	Chip select	RAM activator control signal	
D1~D8	1C9-37~34 32~29	Data line	RAM data line	
DATA	IC9-78	Data	DAC playback signal data (serial)	
DEMP	IC12-24	De-emphasis	De-emphasis on/off signal (L: de-emphasis ON)	
DIRC	IC12-13	Direct	Control signal involved in single track jumping (control only while signal is at L level)	
EXCK	IC9-21	External clock	External clock input	
FG DW	IC12-15	Focus gain down	Control signal for reducing focus servo gain	
FO·DR	IC2-2	Focus drive	Focus actuator drive signal	
FO•ER	IC5-16	Focus error	Focus error signal	
FO·IN	TP1-6	Focus loop in	Focus servo gain adjustment input	
FO•OT	TP1-1	Focus loop out	Focus servo gain adjustment output	
FO•RT	TR1-8	Focus	Focus actuator drive current detector	
FOK	IC5-1	Focus OK	H level output to indicate that "in focus" status is set when RF signal is obtained	
GFS	1C9-28	GFS	Frame sync lock status output (H: locked)	
GND		GND		
INSD	S101	Inside	Detector signal indicating that pick-up has reached inside track	
K				
KD0~KD5	IC11 9~12 15, 17	Key data	Key on/off matrix encoded data	
KS	IC201-11	Key st	Output indicating that key has been pressed (L output when key is ON)	
L·IN	IC12-26	Loading in	Loading-in control signal	
L·OUT	IC12-28	Loading out	Loading-out control signal	
LD ON	IC12-10	Laser diode	Laser diode switching signal (H: diode ON)	
LOAD +	IC4-2		Loading makes drive with	
LOAD -	IC4-10		Loading motor drive voltage output	
LRCK	IC9-80	LR clock	Clock (44.1kHz) for switching decoder (DAC) left/right channels	


^{*1:} Also used in 10-track jumping in PD-6010


Symbol	Signal Source	Signal Name	Function			
MIRR	IC5-18	Mirror	Pitless side (mirror surface) detector signal (pitless side: H)			
MRIH	IC12-14	Mirror inhibit	Control signal which inhibits transfer of MIRR signal from IC5 to IC9			
MUTE	IC12-19	Muting	IC9 digital mute control signal			
OPEN	S102	Open	Output from switch which detects when disc tray is open (open: L)			
RA0V	IC9-57	RAM overflow	Output signal generated when RAM area overflow occurs (overflow: H)			
RESET	Q11-C	Reset	Power ON reset signal			
RFCK	TP4-7(IC9, 25)	Read frame clock	Standard frame clock signal (7.35kHz)			
RMKS	IC12-58	Remote control key	Remote control key strobe passed from remote control decoder (IC11) to main microprocessor (IC12)			
SBS0	IC9-22		Sub-code serial output			
SCK	IC12-55	Serial clock	FL display data transfer clock			
SCLK	IC13-4	System clock	Audio playback system clock			
SC0R	IC9-24		Sub-code sync			
SD	IC12-56	Serial data	Control signal passed to FL control CPU			
SENS	IC6-5		Detector output bus from IC6 & IC9			
SP·DR	CN4-5	Spindle drive	Spindle motor drive output			
SP·RT	CN4-6	Spindle return	Spindle motor drive current detector			
SRES	IC12-57	Serial reset	Key/display/microprocessor reset signal			
STS	IC201-21	Status	Display data "ready to send"			
SUBO	IC9-23	Sub-code Q	Sub-code Q output (address and other data)			
TR·DR	1C2-8	Tracking drive	Tracking actuator drive signal			
TR·ER	IC5-17	Tracking error	Tracking servo error output			
TR·IN	TP1-7	Tracking loop in	Tracking servo gain adjustment input			
TR·OT	TP1-2	Tracking loop out	Tracking servo gain adjustment output			
TR·RT	TP1-9	Tracking return	Tracking actuator drive current detector			
WCLK	IC13-21		Digital filter 88.2kHz strobe signal input			
WDCK	IC9-79		Digital filter 88.2kHz strobe signal output			
WE	IC9-49	Write enable	RAM write enable			
WFCK	IC9-25	Write from clock	Frame clock signal made from data (frame sync. lock: 7.35kHz)			
XLT	IC12-16		Servo and decode IC serial data latch clock pulse signal			


• WAVE FORM


Note: The waveform voltage and time values are general guides only.


	PLAY	SEARCH
1	OV -0.58V 	OV
2	1.5Vp-p	1.5Vp-p 1.3V
3	OV	0v
4	TVP-P	0V 4 5V p-p
5	0.1Vp-p	O.5Vp-p
(G)	0.2Vp-p	0.2Vp-p
(7)	0.1Vp-p 0.0V -50mV	+0 5V 0V -0.5V
(8)	0.5Vp-p	
9	136 µsec 5V 0V	5v ov

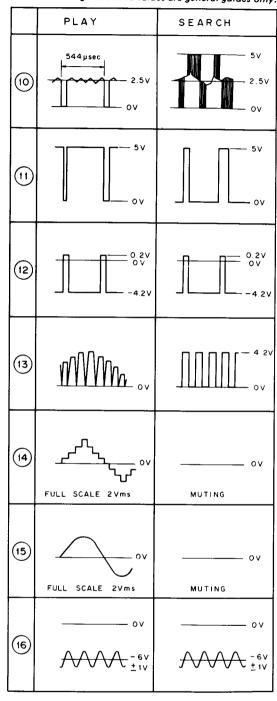

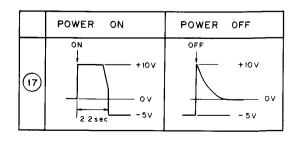

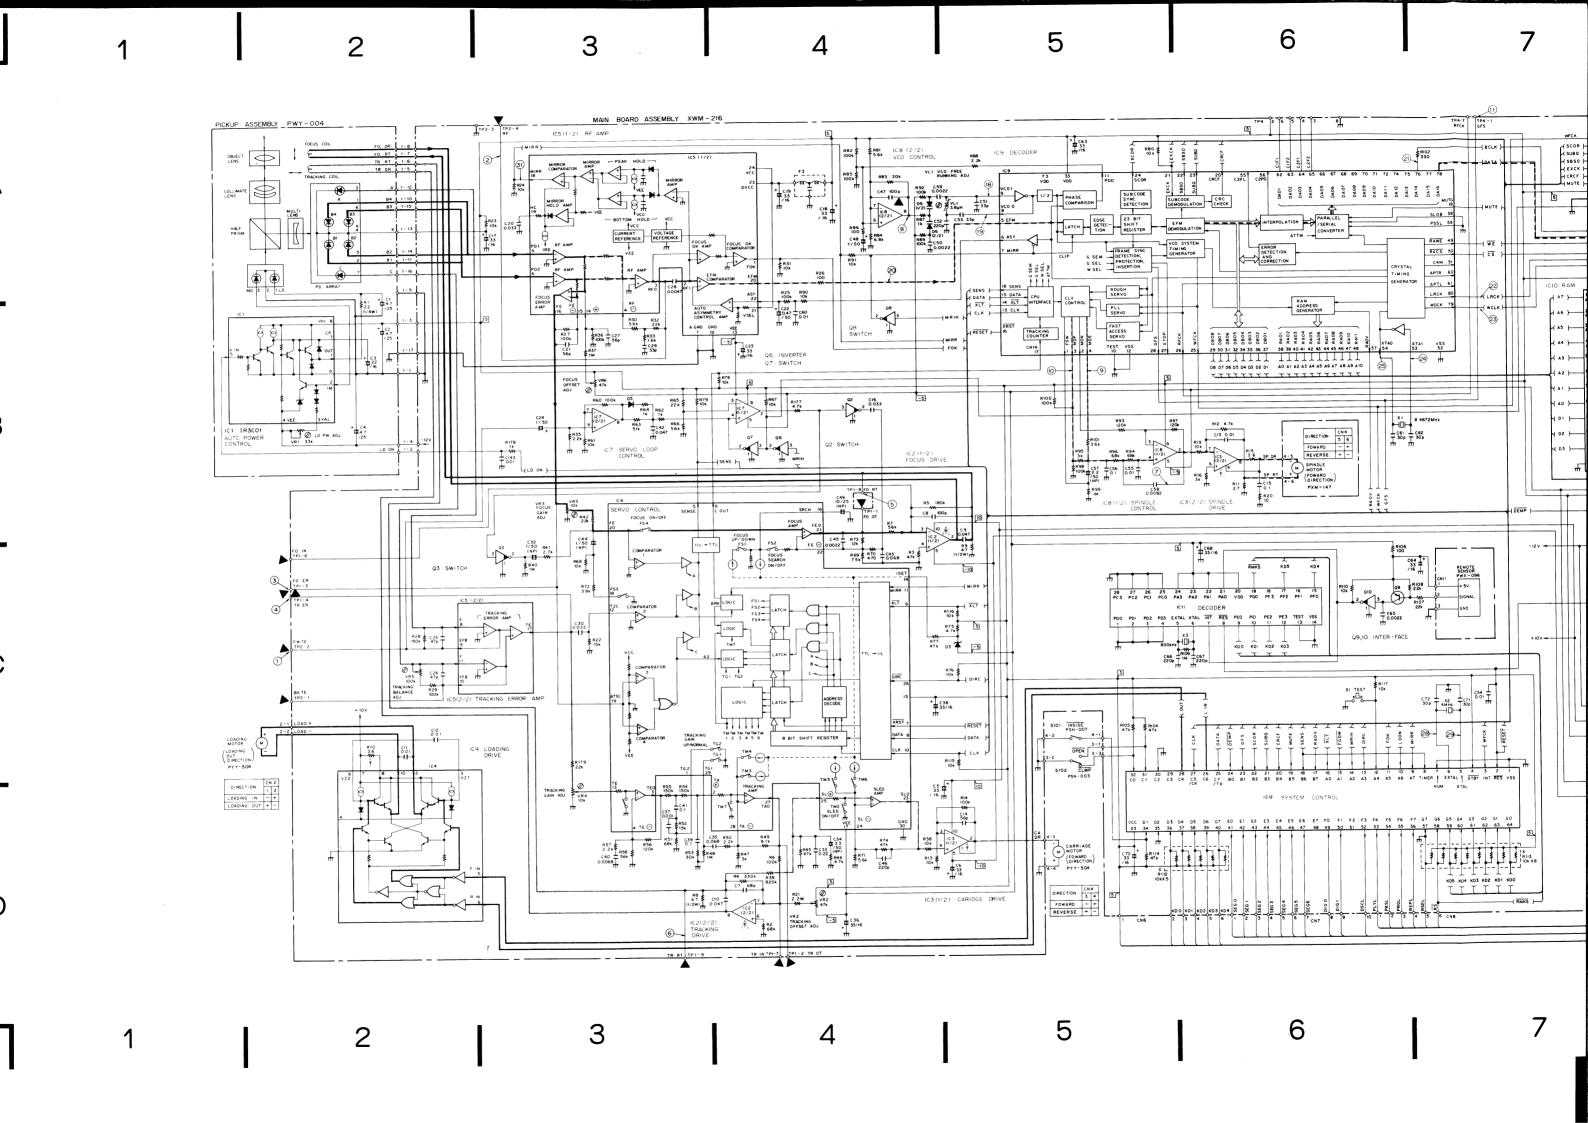

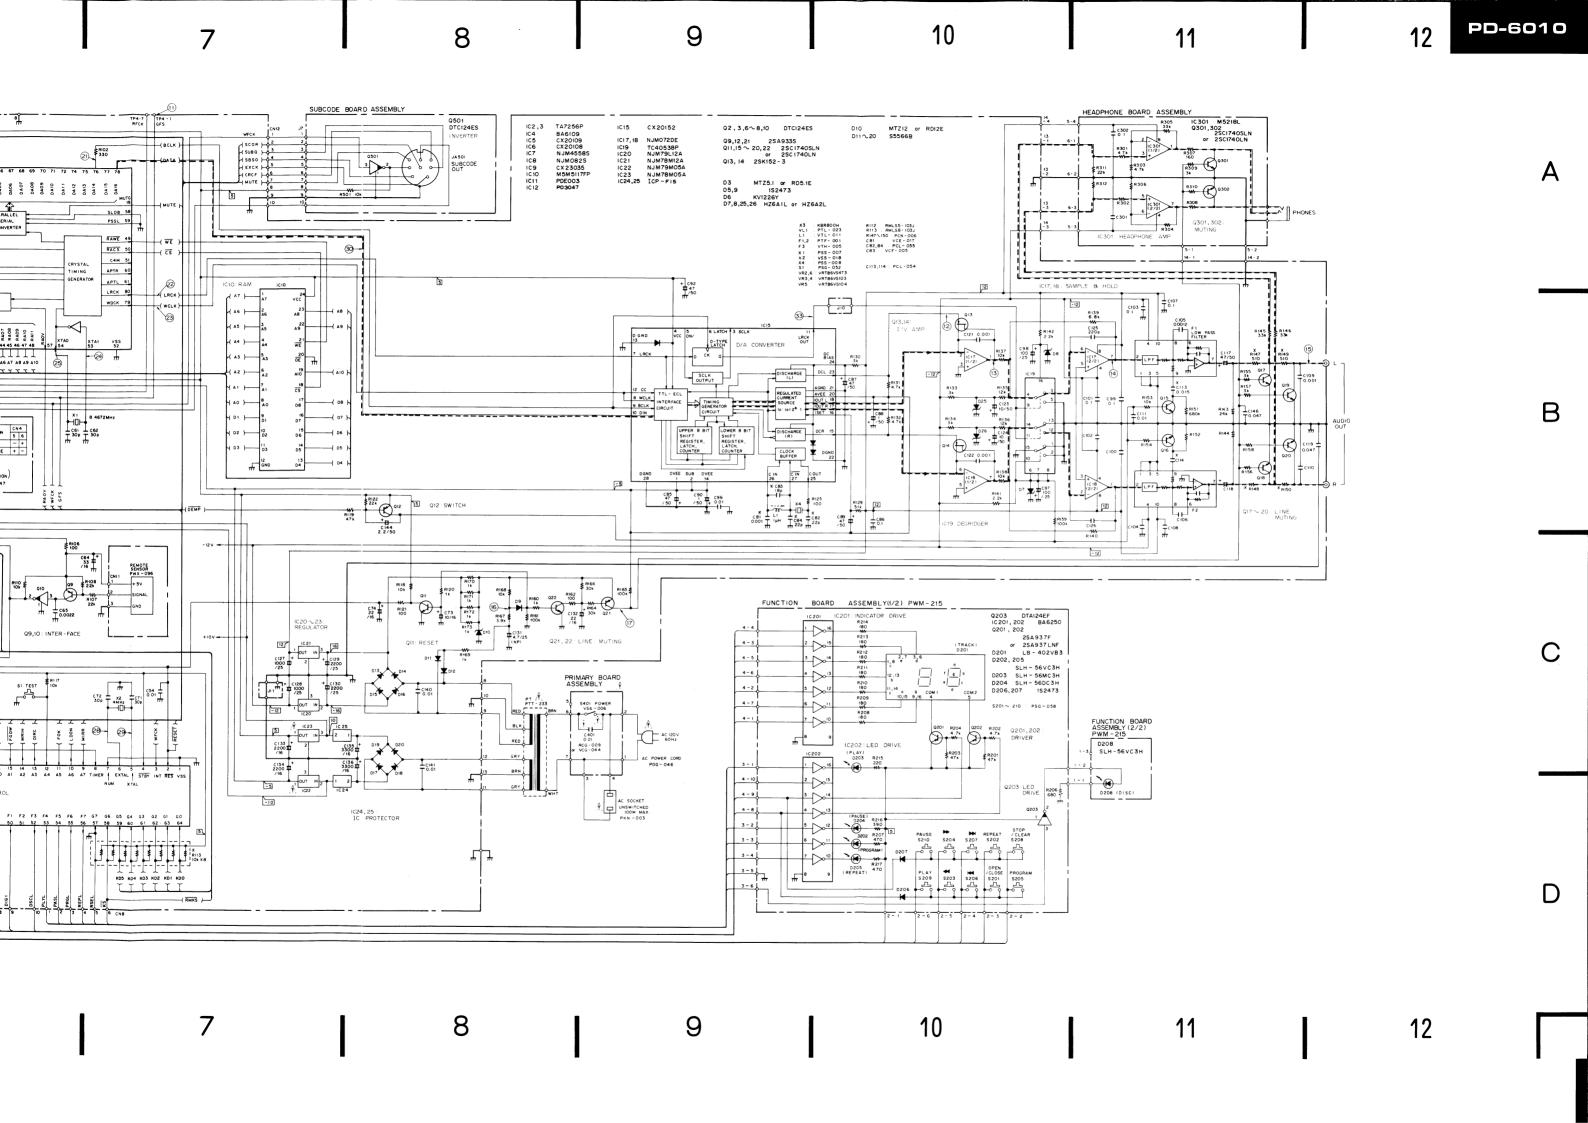

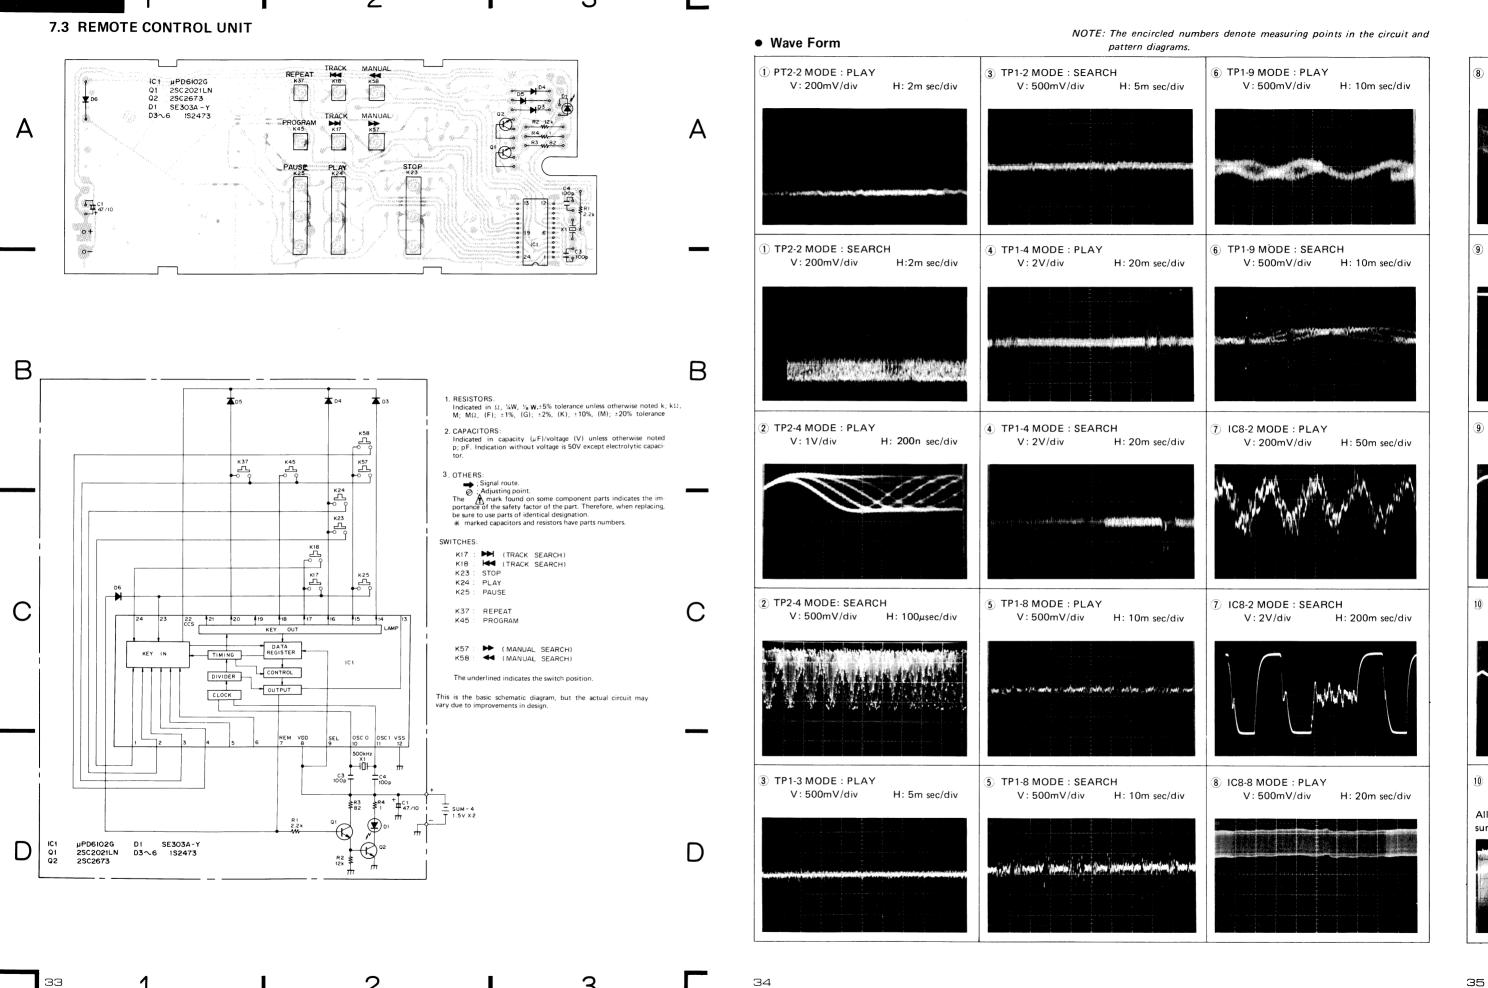

PD-6010

(8) IC8-8 MODE : SEAF V: 500mV/div 9 IC9-4 MODE : PLAY V: 2V/div 9 IC9-4 MODE: SEAF V: 2V/div 10 IC9-3 MODE : PLAY V: 2V/div 10 IC9-3 MODE : SEAF V: 2V/div All waveforms shown sured by digitizer.

H: 10m sec/div


H: 10m sec/div


H: 50m sec/div

H: 200m sec/div

H: 20m sec/div


СН

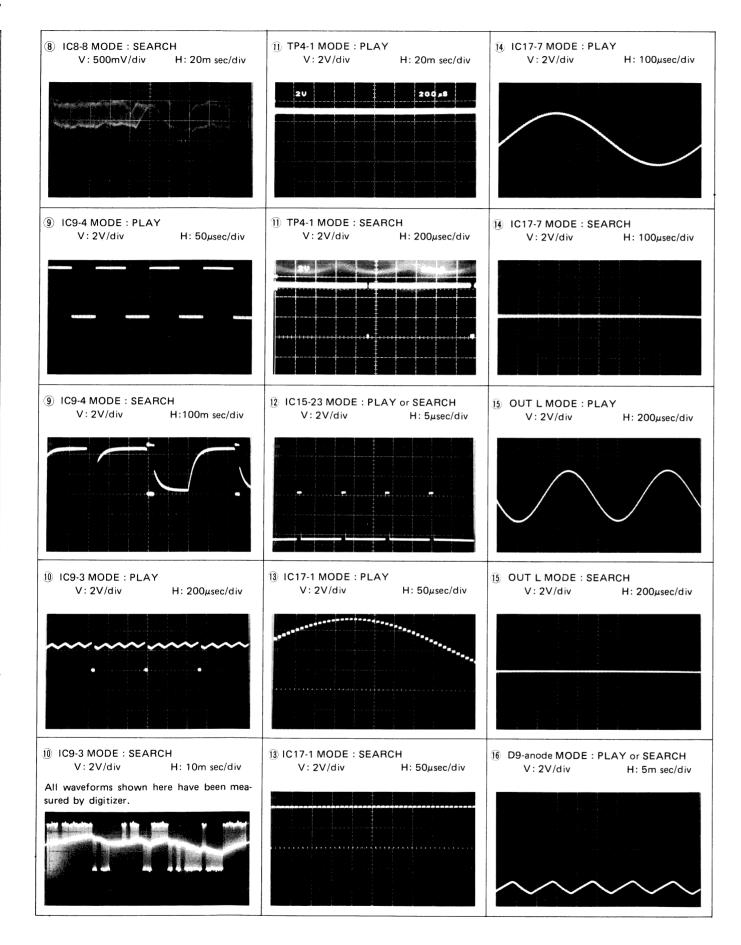

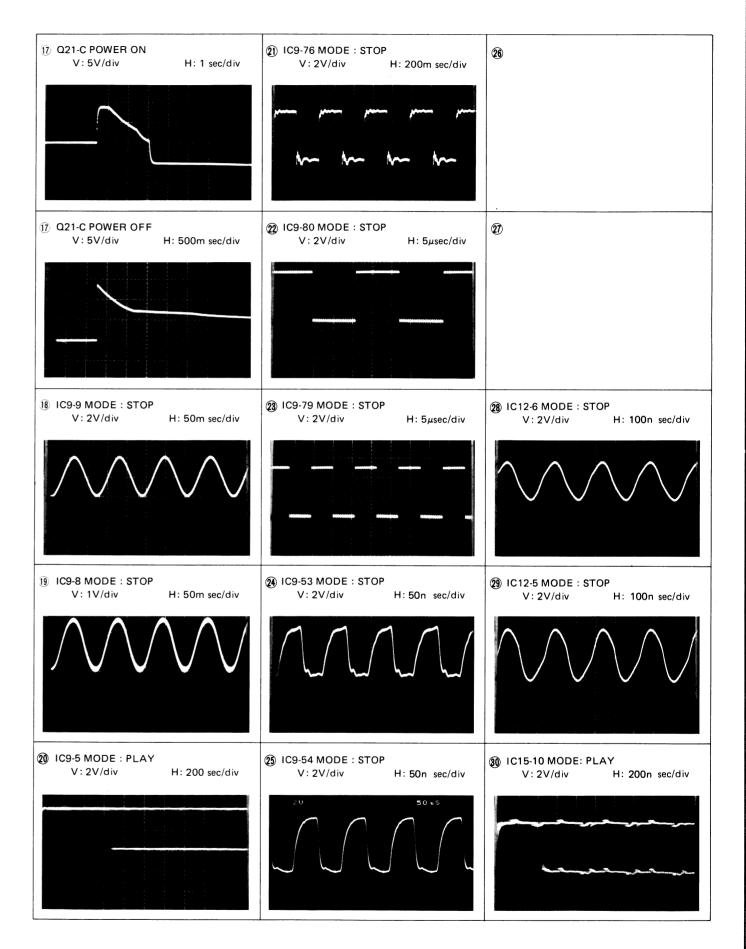



35

36

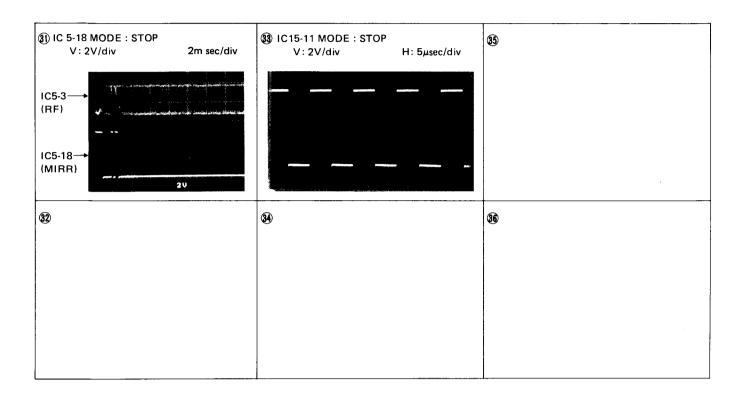


External Appearance of Transistors and ICs

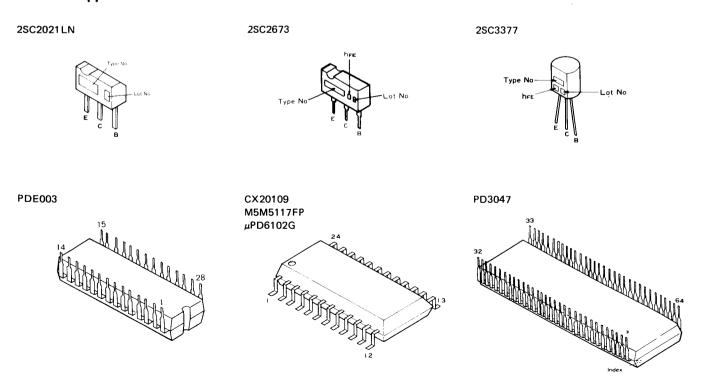

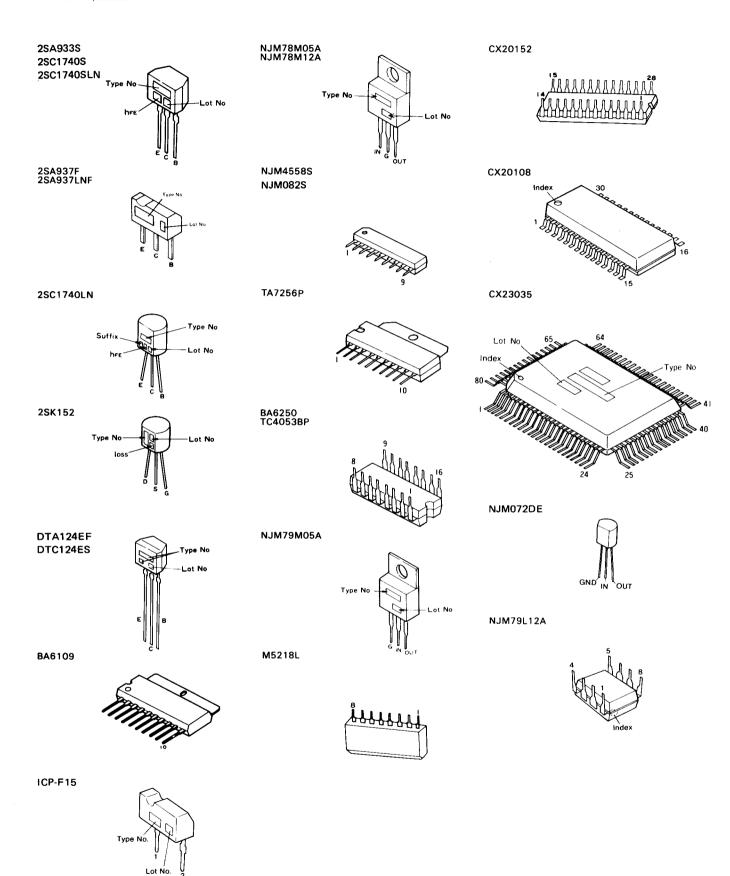

8. PACKING

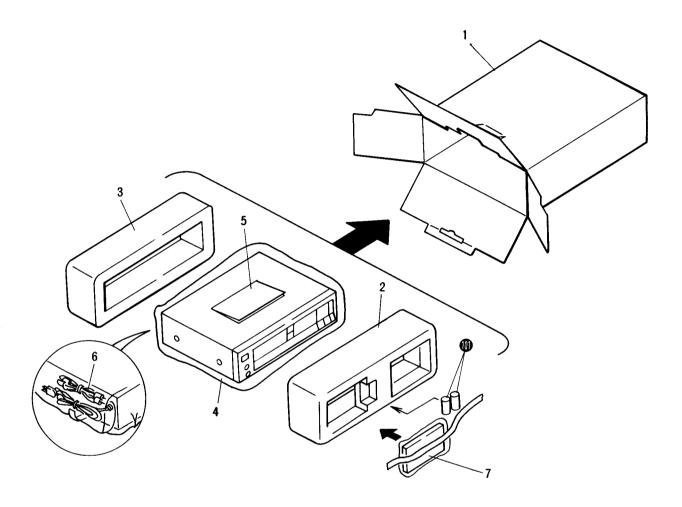

Parts List of Packing

Mark	No.	Part No.	Description
	1.	PHH-273	Packing case
2.		PHC-111	Protector (F)
	3.	PHC-114	Protector (R)
	4.	Z22-006	Polyethylene sheet
	5.	PRB-297	Operating instructions (English)
	6.	PDE-321	Connection cord
	7.	PWW-003	Remote control unit
	101.		Battery

9. ELECTRICAL PARTS LIST

NOTES:

- When ordering resistors, first convert resistance values into code form as shown in the following examples.
 - Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

 $5.62k\Omega$ 562×10^{1} $5621 \dots RN\%SR$ 5621 F

- The i mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks ★★ and ★.
 - ** GENERALLY MOVES FASTER THAN *

This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

Miscel	laneous			Mark	Symbol & Description	Part No.
Mark	Symbol	& Description	Part No.	<u>^</u> * * *	IC24, IC25	ICP-F15
.		•	_		IC2, IC3	TA7256P
4.	Main boa	ard assembly	XWM-216	**	IC19	TC4053BP
	Headpho	one board assembly				
	Primary	board assembly		**	Q2, Q3, Q6 - Q8, Q10	DTC124ES
	Sub-cord	board assembly		**	Q9, Q12, Q21	2SA933S
	Function	n board assembly	PWM-215	**	Q11, Q15 — Q20, Q22	2SC1740SLN
,						(2SC1740LN)
. ↓ ★	Power tr	ansformer (120V)	PTT-233	**	Q13, Q14	2SK 152
<u>^</u>	AC powe	er cord	PDG-046			
A	AC sock	et (AC OUTLETS)	PKN-003	*	D5, D9	1SS254
				*	D3	MTZ5.1
**	Motor as	sembly (LOARDING)	PYY-504		(RD5.1E)	
**	Motor as	sembly (CARRIAGE)	PYY-504	*	D10	MTZ12
**	Spindle i	indle motor PXM-147				(RD12E)
**	S101	Slide switch (INSIDE)	PSH-007			,,
**	S102	Spring switch (CLMP)	PSN-003	*	D6	KV1226Y
				*	D7, D8, D25, D26	HZ6A1L/2L
	Pickup a	ssembly	PWY-004	*	D11 – D20	S5566B

Main Board Assembly (XWM-216)

SEMICONDUCTORS

SWITCH


Mark	Symbol & Description	Part No.	Mark	Symbol 8	& Description	Part No.
**	IC9	CX23035	**	S1	Tact switch (TEST)	PSG-052
**	IC6	CX20108				
**	IC5	CX20109	COILS	AND FIL	TERS	
	IC15 IC12	CX20152 PD3047	Mark	Symbol 8	& Description	Part No.
	1012	1 20047		VL1	VCO coil 3.8μH	PTL-023
**	IC11	PDE003			(8.6436MHz)	
**	IC10	M5M5117FP		L1	OSC coil 1µH	VTL-011
**	IC4	BA6109				
**	IC17, IC18	NJM072DE		F1, F2	Low pass filter	PTF-001
**	IC8	NJM082S		F3	EMI filter	VTH-005
	IC21	NJM78M12A				
A ★★	IC23	NJM78M05A				
_ , ★★	IC20	NJM79L12A				
A ★★	IC22	NJM79M05A				
**	IC7	NJM4558S				


CAPACITORS


rk	Symbol & Description	Part No.	RESISTORS NOTE: When ordering resistors, convert the resistance value.			
		-			uering resistors, convert e form, and then rewrite t	
	C22	CEAR47M50			•	-
	C24, C88, C90	CEA010M50	Mark	Symbol 8	& Description	Part No.
	C123, C124	CEA100M50		VB3 VE	4 Semi-fixed	VRTB6VS103
	C74, C132	CEA220M16		•	6 Semi-fixed	VRTB6VS473
	C5, C6 C17 — C19, C23, C36, C38,	CEA330M16		VR5	Semi-fixed	
	C63, C70		*	V NO	Semi-rixed	VRTB6VS104
	C85, C87, C89, C92, C117, C118	CEA470M50		R112		RMLS5-103J
	C97, C98	CEA101M25		R113		RMLS8-103J
	C73	CEA100M16				
	C144	CEA2R2M50		R8, R9		RD1/2PM4R7J
	C127, C128	CEA102M25		R129, R	143, C144, R147 – R150	RDR1/4PM □□□J
	C129, C130	CEA222M25		R81, R8	2, R84, R85	RN1/6PQ □□□□J
	•					
	C133, C134	CEA222M16 CEA332M16		Other res	istors	RD1/6PM □□□J
	C135, C136					
	C32, C44	CEANP010M50	OTHER	S		
	C57	CEANP2R2M50	Mark	Symbol 8	& Description	Part No.
	C34	CEANP3R3M50		JA1	Terminal (AUDIO OUT)	VKB-006
	C131	CEANP4R7M25	*	X1	Crystal resonator	PSS-007
	C49	CEANP100M25	*	Λ1	(8.4672MHz)	1 33-007
	C48	CEANL010M50	*	X4	Crystal resonator	PSS-008
	C37	CQMA102J50			(35,002MHz)	
	C45, C50, C59, C65	CQMA222J50	*	X2	Ceramic resonator	VSS-018
	C28		*	X3	Ceramic resonator	KBR800H
		CQMA472J50				
	C40	CQMA682J50	Headpl	hone Bo	ard Assembly	
	C58	CQMA822J50	-	NDUCT	<u> </u>	
	C55, C60	CQMA103J50	Mark	Symbol & Description		Part No.
	C30	CQMA223J50	-			
	C16, C20	CQMA333J50	**	IC301		M5218L
	C42	CQMA473J50				
	C35, C43	CQMA683J50	**	Q301, Q3	302	2SC1740SLN
	C15, C39, C41, C56, C86,	CQMA104K50				(2SC1740LN)
	C99 - C104, C107, C108		CAPAC	ITORS		
	C33	CQMA224J50	טאו אט	110113		
	C125, C126	CQSF221J125	Mark	Symbol 8	Description	Part No.
	C121, C122	CQSF102J125		C201 C2	02	00MA104KE0
	3,11, 3,22	0.001 1020 120		C301, C3	.02	CQMA104K50
	C10E C106	CQSF122J125		C303		CKDYF473Z50
	C105, C106					
	C109, C110	CQSF102J125	RESIST	TORS		
	C113, C114	PCL-054				
	C82, C84 C81	PCL-055 VCE-017			dering resistors, convert e form, and then rewrite t	
	000 (15.)	V.05.005	Mark		& Description	Part No.
	C83 (18p)	VCF-005				- 311110.
	C71, C72	CCDSL300J50		All resist	ors	RD1/6PM 🗆 🗆 🗓 J
	C25, C26	CCDSL470J50				
	C14, C21, C27	CCDSL560J50	OTHER	RS		
	C7	CCDSL680J50	Mark	Symbol	& Description	Part No.
	C8, C47	CCDSL101J50		14201	Torminal /UE A DDUONE	·
	C46, C66, C67	CCDSL221J50		JA301	Terminal (HEADPHONE)	FKN-004
	C51, C53	CCDUJ330J50	Driman	v Daard	Assembly	
	C52	CCDUJ221J50			Assembly	
	C61, C62	CCDCH300J50	SWITCH	-		
			Mark	Symbol 8	& Description	Part No.
	C29	CCDCH330J50	A	6401	Downer with the /Bowlean	V04 600
	C11 - C13, C54, C96, C111, C140, C141, C143	CKDYF103Z50	≜ ★★	5401	Power switch (POWER)	VSA-006
	G171, G170					
	C10, C119, C146	CKDYF473Z50				


CAPAC Mark	Symbol & Description	Part No.		te Control Unit (PWW-00	JSJ
	·		_	ONDUCTORS	
À	C401	RCG-009 (VCG-044)	Mark	Symbol & Description	Part No.
		(VCG-033)	**	IC1	μPD6102G
Sub-co	de Board Assembly		**	Q1	2SC2021LN
SEMIC	ONDUCTOR		**	Q2	(2SC1740S) 2SC2673
Mark	Symbol & Description	Part No.		42	(2SC3377)
**	Q501	DTC124ES	_ *	D1	SE303A-Y
RESIST	OR		À	D0 D0	(SE303)
Mark	Symbol & Description	Part No.		D3 - D6	1 S 2473
	· 		— CAPAC	ITORS	
	R501	RD1/6PM103J	Mark	Symbol & Description	Part No.
OTHER	IS .			C1	CEAS470M10
Mark	Symbol & Description	Part No.		C3, C4	CCDCH101J50
	JA501 Socket (SUBCODE C	OUT) PKP-038	RESIST	ORS	
				When ordering resistors, co	
Functi	on Board Assembly (PWM	-215)		into code form, and then reu	prite the part no. as befo
SEMIC	ONDUCTORS		Mark	Symbol & Description	Part No.
Mark	Symbol & Description	Part No.		R1 – R4	RD1/4PM 🗆 🗆 🖂 J
**	IC201, IC202	BA6250	OTHER	S	
**	Q201, Q202	2SA937F	Mark	Symbol & Description	Part No.
		(2SA937LNF)	*	X1 Ceramic resonator	CSB500EBL
**	Q203	DTA124EF			(KBR500BTL)
*	D206, D207	1SS254			
*	D201	LB-402VB3			
*	D202, D205, D208	SLH-56VC3H			
*	D204	SLH-56DC3H			
*	D203	SLH-56MC3H			
SWITCH	HES				
Mark	Symbol & Description	Part No.			
**	S201 - S210 Tact switch	PSG-058			
CAPAC	ITORS				
Mark	Symbol & Description	Part No.			
	C201	CKDYF103Z50			
RESIST	ORS				
	When ordering resistors, conv into code form, and then rewri				
i	nto code joint, and then rewit	to the part hor as object			
<i>i</i> Mark	Symbol & Description	Part No.			


10. TROUBLESHOOTING

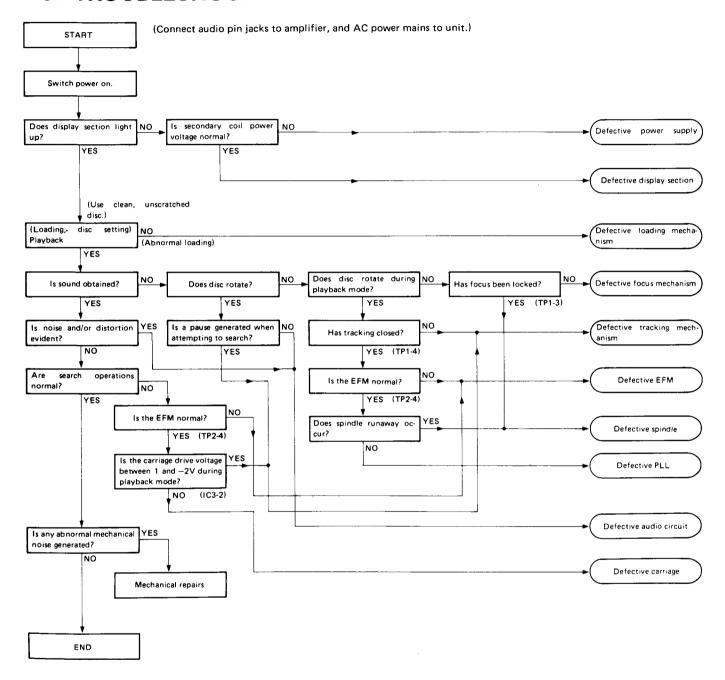


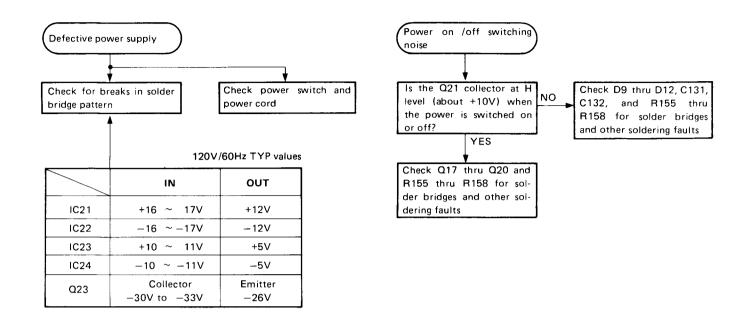

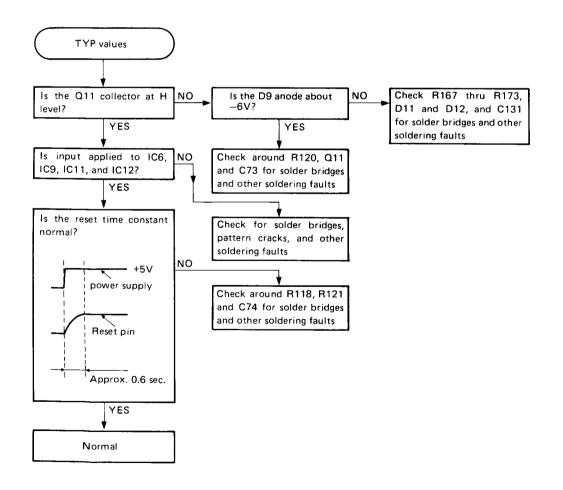


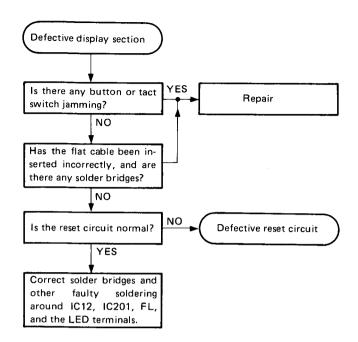


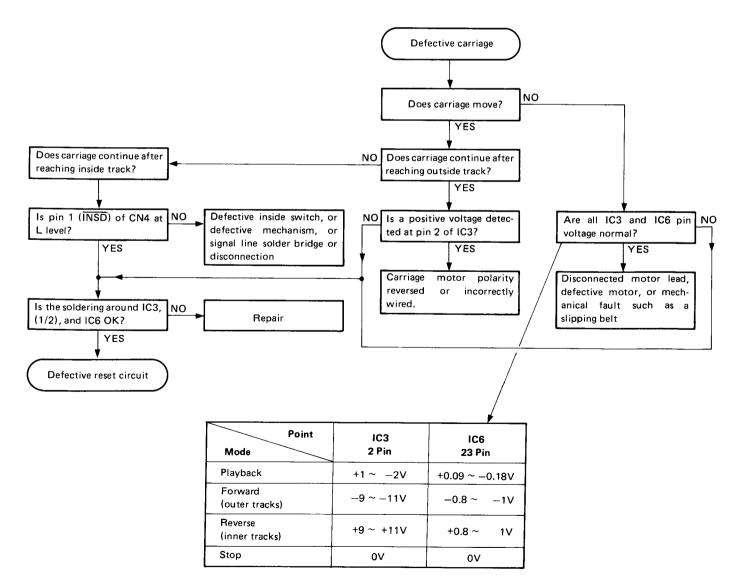


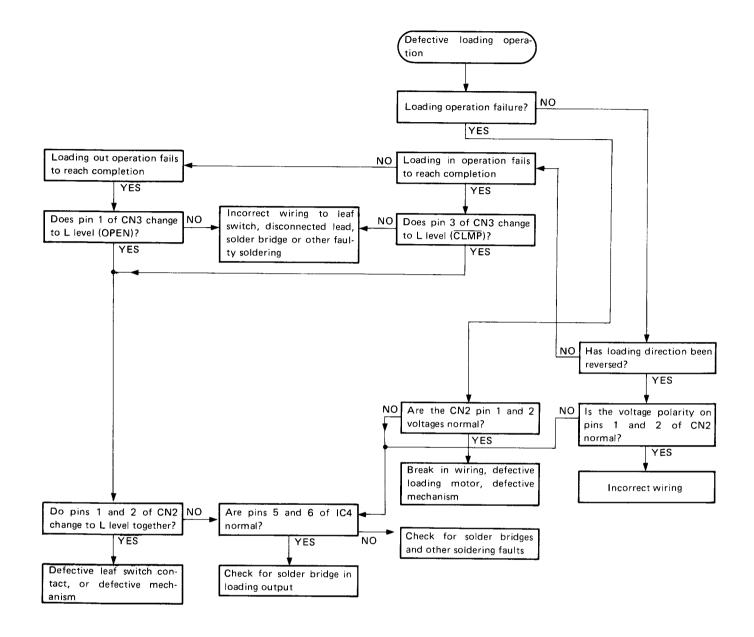



Point Mode	IC4 5 Pin	IC4 6 Pin	CN2 1 Pin	CN2 2 Pin
Loading in	L	Н	0V	+8 ~ 10V
Loading out	Н	L	+8 ~ 10V	0V
Loading in completed	Н	Н	0V	0V
Loading out completed	L	L	0V	0V

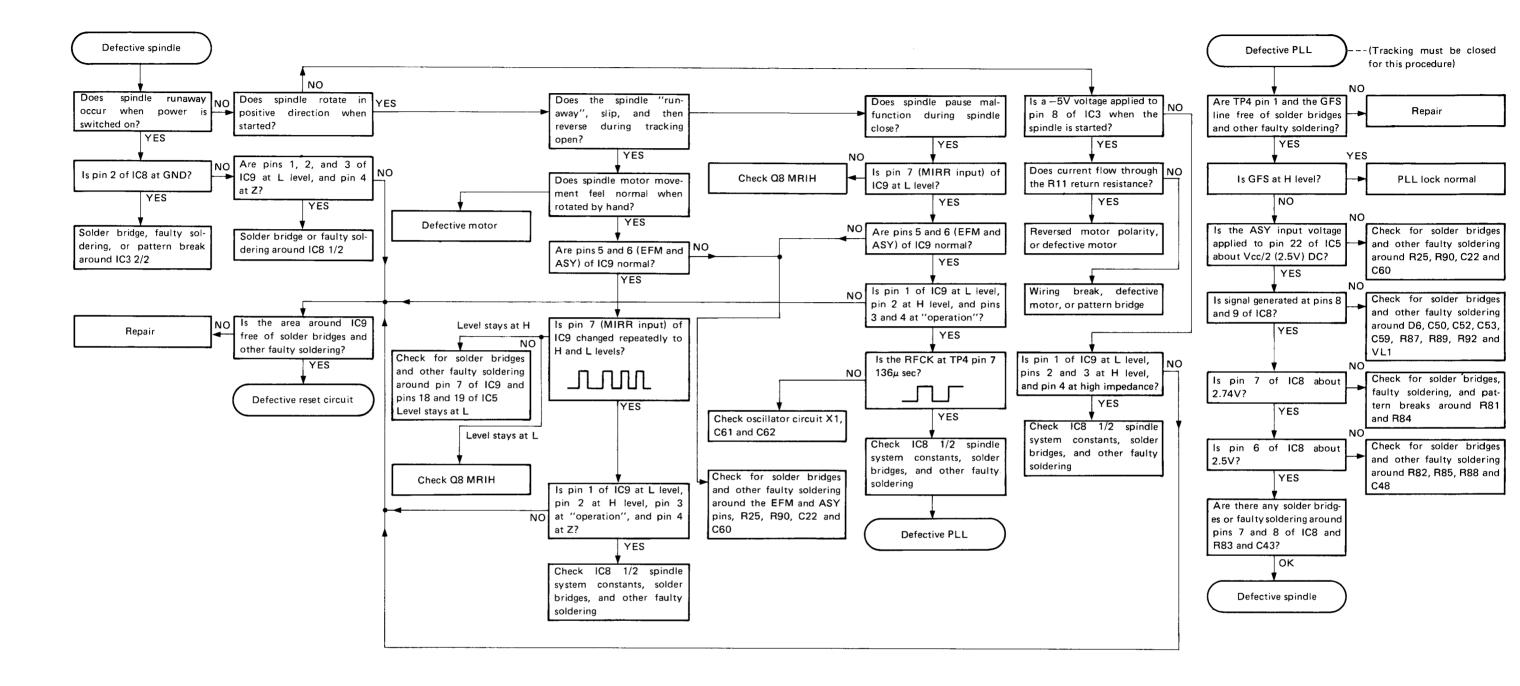

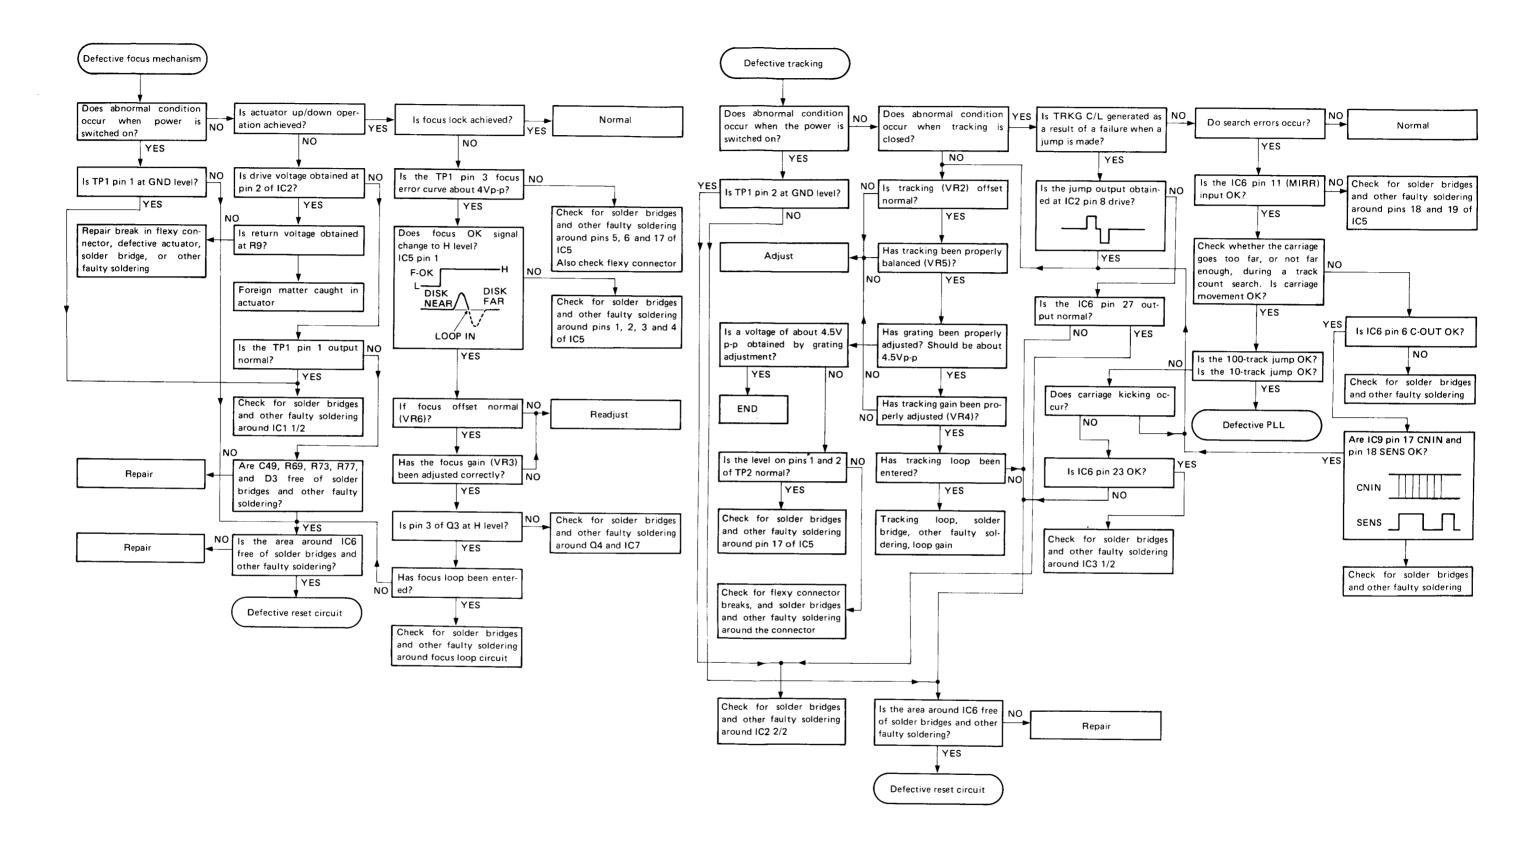

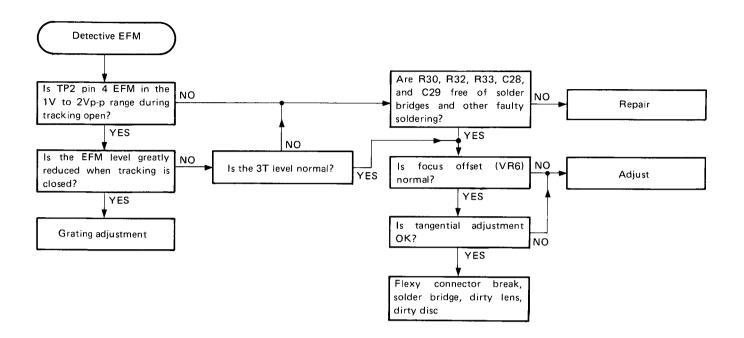

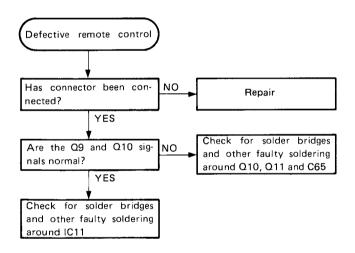

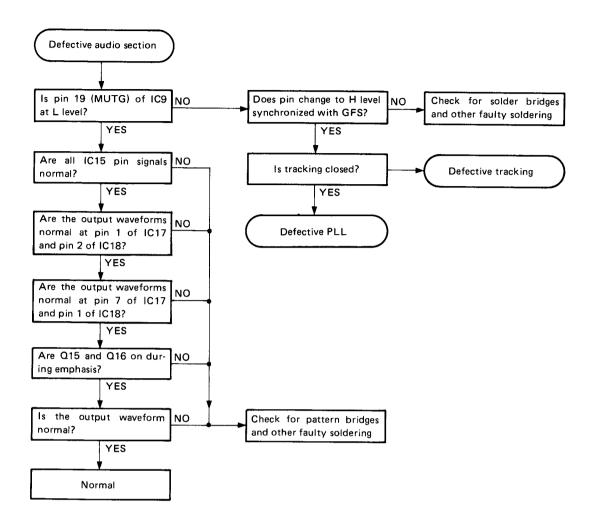

11. ADJUSTMENTS

The Compact Disc Player adjustment are to be executed in the following order.

Adjustment Items

- 1. Tracking offset and focus offset adjustments
- 2. LD (laser diode) power check
- 3. Focus lock and spindle lock checks
- 4. Grating adjustment
- 5. Tracking balance adjustment
- 6. Tangential adjustment
- 7. Focus gain adjustment
- 8. Tracking gain adjustment
- 9. VCO free-run frequency adjustment

Measuring Equipment

- 1. Dual trace oscilloscope
- 2. Optical power meter
- 3. Test disc (YEDS7)
- 4. Focus and tracking adjustment filters
- 5. Loop gain adjustment bandpass filter
- 6. Signal generator
- 7. Grating driver
- 8. Other regular measuring equipment

Test Mode

Disc player adjustments are executed in test mode.

Test mode setting and cancellation procedures -

- (1) Switch POWER (S401) on while depressing the TEST MODE switch (S1).
- (2) Then switch the MANUAL SEARCH FWD (▷▷) or REV (<▷) switch on to activate test mode.
- (3) Test mode is cancelled by switching POWER

The various key functions during test mode are listed in Table 11-1.

Adjustment Controls

VR2: Tracking offset (TR.OF)
VR3: Focus gain (FO.GA)
VR4: Tracking gain (TR.GA)
VR5: Tracking balance (TR.BL)
VR6: Focus offset (FO.OF)
VL1: VCO free run (VCO coil)


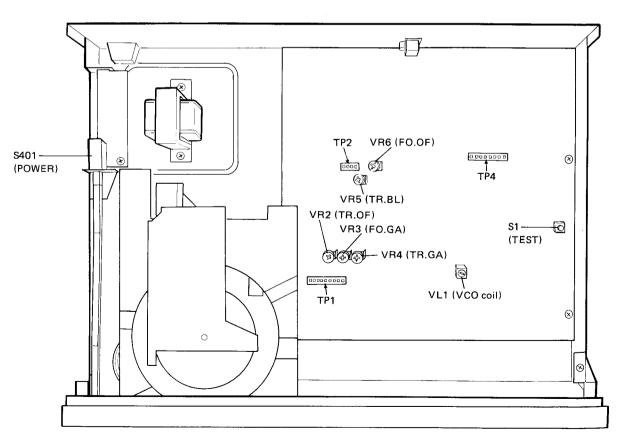


Fig. 11-1 Adjustment Points

During test mode, each servo mechanism can be closed and opened by separate operations. Consequently, each servo must be closed one at a time

(in serial sequence) to set play mode. Note that play mode is not activated by simply pressing the PAUSE key ([]]) during test mode.

Example: Switch from stop to play mode.

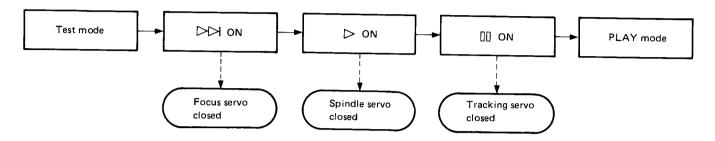

• The servo mechanisms comply with a serial sequence during test mode.

• Key Function in Test Mode

Symbol	Key	Function during test mode	Description
⊳⊠	TRACK FWD	Focus servo closed	Laser diode lights up, focus actuator is moved up/down, and focus servo is closed.
\triangleright	PLAY	Spindle servo closed	Spindle servo closed in CLV-A mode after spindle motor is kicked.
00	PAUSE	Tracking servo closed/opened	Tracking servo closed by pressing in a toggle action, and player is switched to play mode (with the focus and spindle servos closed). PAUSE indicator lights up, and tracking servo is opened when pressed a second time.
△ ₩	MANUAL SEARCH REV	Carriage reverse (towards disc center)	Carriage is moved towards disc center at the fast speed of about 1cm/sec. Since there is no safety mechanism to stop the carriage, do not move it too far.
\triangleright	MANUAL SEARCH FWD	Carriage forward (towards disc edge)	Carriage is moved towards disc edge at the fast speed of about 1cm/sec. Since there is no safety mechanism to stop the carriage, do not move it too far.
	REPEAT	Lens moved up/down	The laser diode lights up, and the focus actuator is moved up/down. The focus servo is not closed.
	STOP	Stop	All servos are stopped and reset to the initial status.
	OPEN/CLOSE	(Disc tray) opened/closed	Disc tray is opened/closed. Note pickup does not return to arm rest when tray is opened, and remains in the same position when tray is closed.

Table 11-1

Step No.	Oscille positie	oscope on H	Test points	Adjustment positions	Check items/ Adjustment specifications	Adjustment procedure
1			OFFSET	AND FOCU	JS OFFSET ADJ	USTMENTS
			TP 1 Pin 9 (TR. RT) TP 1 Pin 3 (FO. ER)	VR 2 (TR. OF) VR 6 (FO.OF)	0V ± 10mV 0V ± 10mV	 Set the player to test mode (see page 53) Adjust the voltage at TP1 pin 9 TR.RT (tracking return) to 0V ±10mV by turning the VR2 TR.OF (tracking offset) control. Adjust the voltage at TP1 pin 3 FO.ER (focus error) to 0V ±10mV by turning the VR6 FO.OF (focus offset) control.
2	LD (l	ASER I	DIODE)	POWER CH	ECK	
				VR 1	Specified rating (0.26mW ± 0.02mW)	 Set to normal mode. (Normal mode can be set by switching the power off and on again.) Position the optical power meter sensor immediately above the object lens. Press the PLAY key without a disc loaded, and check that the LD (laser diode) power reading in the optical power meter is within the specified rating range (0.26mW ±0.02 mW).
3	FOCI	JS LOCI	C AND S	PINDLE LO	OCK CHECKS	
	V 0.5V/div	H 100msec /div	TP2 pin 4 (RF output)		RF output generated Normal rotation	 Load the test disc. Set the player to test mode (see page 53) Press the MANUAL SEARCH FWD key (▷▷) to move the pick-up to about the center of the disc. Note that step must be executed. Observe TP2 pin 4 RF (RF output) by oscilloscope to check that an RF output signal is generated when the TRACK FWD key (▷▷) is pressed. Press the PLAY key (▷) and check that the disc rotates at normal speed (about 300rpm near the center of the disc) in the correct direction (clockwise).

Step	Oscil posit	loscope ion	Test	Adjustment	Check items/	
No.	V	Н	points	positions	Adjustment specifications	Adjustment procedure
4	GRA	TING A	ADJUSTM	IENT		
						Load the test disc.
						Set the player to test mode (see page 53)
						 Press the TRACK FWD (▷□) and PLAY (▷) keys in that order to close the focus and spindle servos (leaving the tracking servo open).
						 Using the MANUAL SEARCH FWD key (▷▷), move the pick-up to a position near the center of the disc, and ensure that the grating driver (R-122) can enter the pick- up grating adjustment hole from the left hand side of the set by the pick-up movement. (See Figure 11-3)
			TP 1 Pin 4 (TR. ER)	Grating	NULL point	Observe the TP1 pin 4 TR.ER (tracking error) waveform by oscilloscope. Insert a 4kHz cut-off low pass filter at this stage. (See Figure 11-2)
			L.P.F.			
	Pin 4	TP 1	39KΩ			
	(TR.	ER)			Oscilloscope	
	Din E		Ī	0.001μF	measurement	
	Pin 5 (GNE	، ا	<u></u>			
		ı	Fig	g. 11-2		
						 Insert the tracking driver into the adjustment hole and turn the driver to find the NULL point (see Photograph 11-1).
						 At this stage, gently press against the pick-up with a screwdriver etc as indicated in Figure 11-3 to prevent the pick-up from rising when the grating driver is tuned.
				Grating	Maximum amplitude	 Next turn the grating driver slowly clockwise from the NULL point and adjust to the position where the wave- form (tracking error signal) first reaches maximum amplitude (see Figure 11-3).
						Note: Press the down on the grating driver to ensure that the pick-up does not float upwards.
			X axis TP2 pin 1 (BKTE)	Grating	Lissajous 45°	 Connect TP2 pin 1 (BKTE) to the X axis of the oscilloscope, and pin 2 (FWTE) to the Y axis by AC coupling, and observe the Lissajous pattern (see Photograph 11-4).
			Y axis TP2 pin 2 (FWTE)			 Fine adjust the grating driver to a position where the Lissajous pattern in practically as straight line (Lissajous 45°). (See Photograph 11-5)



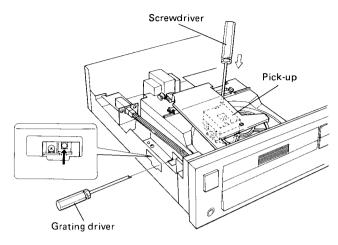



Fig. 11-3 Grating Adjustment

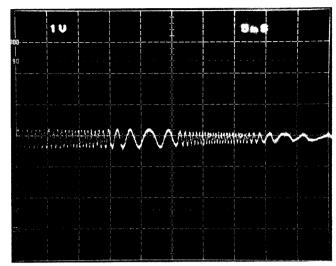


Photograph 11-1 NULL point

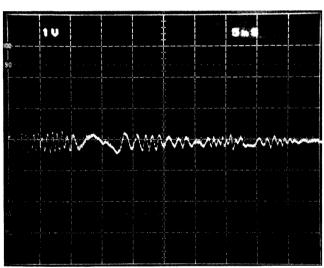


Photograph 11-2 Waveform beyond the NULL point

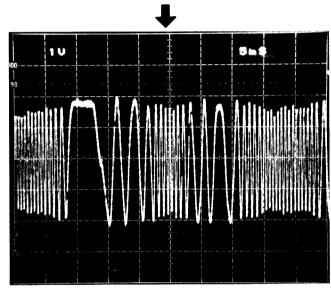

Photograph 11-3 Maximum amplitude

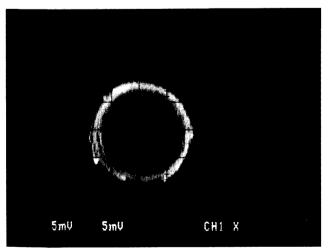

Photograph 11-4

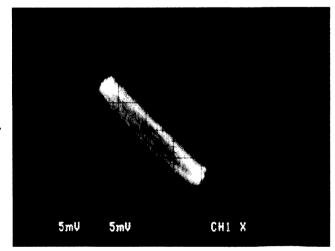

Photograph 11-5

Step No.	positi		Test points	Adjustment positions	Check items/ Adjustment	Adjustment procedure
5	V TRA	H CKING	BALANC	E ADJUSTI	specifications MENT	
5	TRA	5msec /div	TP 1 Pin 4 (TR. ER)	VR 5 (TR. BL)	MENT	Load the test disc. Set the player to test mode (see page 53) Move the carriage to a position near the center of the disc by using the MANUAL SEARCH FWD key (▷▷). Press the TRACK FWD key (▷▷) and then the PLAY key (▷) to start the disc turning. Observe TP1 pin 4 TR.ER (tracking error) in the oscilloscope, and eliminate the DC component of the tracking error by adjustment the VR5 TR.BL (tracking balance) control. Photograph 11-6 DC components included Photograph 11-7 DC components excluded

Step	Oscilloscop position	Test	Adjustment	Check items/ Adjustment	Adjustment procedure
No.	V	H	positions	specifications	
6	TANGE	NTIAL ADJU	JSTMENT		
No.	v		positions	-	 Load the test disc. Set the player to test mode (see page 53) Using the MANUAL SEARCH FWD key (▷), move the pick-up to the disc edge to enable the tangential adjustment screw to be seen from the left hand side (see Figure 11-5). Press the TRACK FWD (▷Ⅺ), PLAY (▷), and PAUSE (□□) keys in that order to close all servos, (The PAUSE indicator will light up.) Observe the TP2 pin 4 RF (RF output) in the oscilloscope and adjust the tangential adjustment screw to obtain the clearest eye pattern. (Figure 11-5). The optimum position is the midpoint between the two positions where the eye pattern starts to deteriorate when the tangential adjustment screw is turned clockwise and counter clockwise. Guidelines for this adjustment: In addition to a clear overall waveform, adjust to obtain relatively slender lines (see photograph 11-8) Where single "diamond" shapes are formed in the eye pattern. To make the waveform easier to observe, insert a 10 kohm resistance (or 5 kohm if the waveform is hard to see) in the tip of the probe as shown in Figure 11-4.
					Fig. 11-4



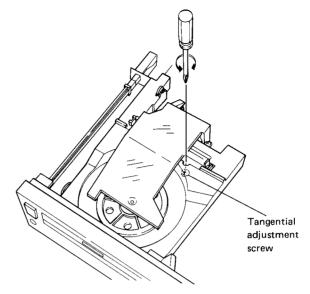


Fig. 11-5 Tangential Adjustment



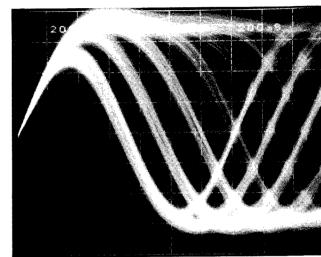


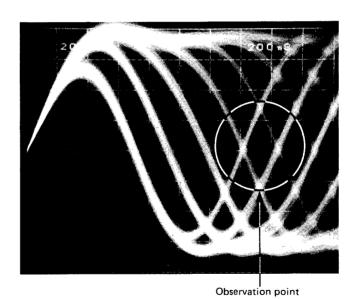


Unaligned

Optimum adjustment



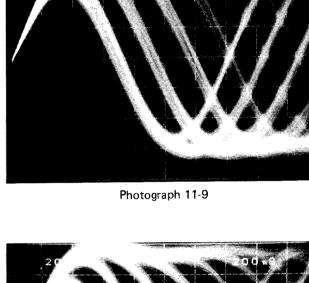

Photograph 11-10

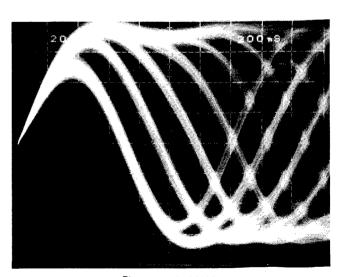

Photograph 11-11

Photograph 11-8

Step	Oscill positi	oscope on	Test	Adjustment	Check items/ Adjustment	Adjustment procedure
No.	V	Н	points	positions	specifications	, agostinoin procedure
7	FOC	JS GAII	N ADJUS	TMENT		 Set the player to test mode (see page 53) Press the STOP key (□) to switch all servos off.
			TP 1 Pin 6 (FO. IN) TP 1 Pin 1 (FO. OT)	VR 3 (FO. GA)	LED (green) on	Adjust the frequency and output voltage of CH1 of the F.T.G adjuster to 875Hz and 0.2Vp-p. Note: If adjusting the output voltage by oscilloscope, disconnect the cable from the F.T.G adjuster circuit board, and measure and adjust with the oscilloscope probe in direct contact with pin 3 of the N1 connector (plug). (Because of the hum generated, do not measure at the tip of the cable.) Connect the F.T.G adjuster as shown in Figure 11-6. Press the TRACK FWD (▷□), PLAY (▷), and PAUSE (□) keys in that order to switch all servos on. Adjust the compact disc player VR3 FO.GA (focus gain) control so that F.T.G adjuster Just LED (green) comes on. C.D PLAYER Pin 6 (FO. IN) BROWN WIRE F.T.G. Adjustor Fig. 11-6 Photograph 11-12 F.T.G adjuster

Step	Osci posi:	lloscope tion	Test	Adjustment	Check items/	
No.	V	Н	points	positions	Adjustment specifications	Adjustment procedure
8	TRA	CKING	GAIN A	DJUSTMENT	F	
			TP 1 Pin 7 (TR. IN) TP 1 Pin 2 (TR. OT)	VR 4 (TR. GA)	LED (green) on	 Set the player to test mode (see page 53) Press the STOP Key (□) to switch all servos off. Adjust the frequency and output voltage of CH2 of the F.T.G adjuster to 1125Hz and 0.4Vp-p. Note: If adjusting the output volage by oscilloscope, disconnect the cable from the F.T.G adjuster circuit board, and measure and adjust with the oscilloscope probe in direct contact with pin 4 of the N1 connector (plug). (Because of the hum generated, do no measure at the tip of the cable.) Connect the F.T.G adjuster as shown in Figure 11-7. Press the TRACK FWD (▷▷), PLAY (▷), and PAUSE (□□) keys in that order to switch all servos on. Adjust the compact disc player VR4 TR.GA (tracking gain) control so that the F.T.G adjuster Just LED (green) comes on. C.D PLAYER

9 VCO FREE—RUN FREQUENCY ADJUSTMENT Common Common	 <u> </u>	 	
O.5V/div IC 8 (2/2) Pin 8 Write the Center Value of the Waveform IC 8 (2/2) Pin 8 O.5V/div O.5V/d			
	Pin 8	Center Value of the	 Press the STOP Key (□) to switch all servos off. Press the TRACK FWD (▷) and PLAY (▷) keys in that order to close the focus and spindle servos. Observe the waveform at pin 8 of IC8 (2/2) by oscilloscope at this time. (V: 0.5V/div.) (Although C47, R83, R87, and other circuit elements are connected to pin 8, the waveform can be easily observed if observed at the legs of C47. See Figure 11-8.) Write the center value of the waveform at pin 8 of IC8 (2/2). Using the core driver, adjust the VL1 (VCO coil) core so that the center value of the oscilloscope waveform is the same as the previously recorded value when the PAUSE key (□ □) is pressed to switch the tracking servo on.
	0.5V/div		0.5V/div IC 8 (2/2) VL 1

11. RÉGLAGE

Les réglages du lecteur de disque compact s'effectuent de la manière suivante:

• Items de Réglage

- 1. Réglages de décalage d'alignement et de mise au point
- 2. Vérification de la puissance du LD (diode au laser)
- 3. Réglage de varrouillage de mise au point et de l'axe
- 4. Réglage de la mire
- 5. Réglage de l'équilibre d'alignement
- 6. Réglage tangentiel
- 7. Réglage du gain de mise au point
- 8. Réglage du gain d'alignement
- 9. Réglage de la fréquence de fonctionnement libre VCO

Equipement de mesure

- 1. Oscilloscope de trace double
- 2. Indicateur de puissance optique
- 3. Disque d'essai (YEDS7)
- 4. Filtres de réglage de mise au point et d'alignement
- 5. Filtre passe-bande de réglage du gain de boucle
- 6. Générateur de signal
- 7. Tournevis de mire
- 8. Autres équipements de mesure d'usage courant

Mode d'essai

Les réglages du lecteur de disque s'effectuent en mode d'essai.

Procédures de réglage et d'annulation du mode d'essai-

- (1) Mettre en route le commutateur POWER (ALIMENTATION) (S401) tout en pressant le commutateur TEST MOE (MODE D'ESSAI) (SI).
- (2) Puis, mettre en route le commutateur MANUAL SEARCH FWD (RECHERCHE MANUELLE EN AVANT) (<
 (⇒
) pour mettre enfonction le mode d'essai.
- (3) Le mode d'essai est annulé en mettant hors de service le commutateur POWER.

Les diverses fonctions des touches au cours du mode d'essai sont indiquées dans le tableau 11-1.

• Commandes de Réglage

VR2: Décalage d'alignement (TR, OF)

VR3: Gain de mise au point (FO, GA)

VR4: Gain d'alignement (TR.GA)

VR5: Equilibre d'alignement (TR.BL)

VR6: Décalage de mise au point (FO/OF)

VL1: Fonctionnement libre VCO (bobine VCO)


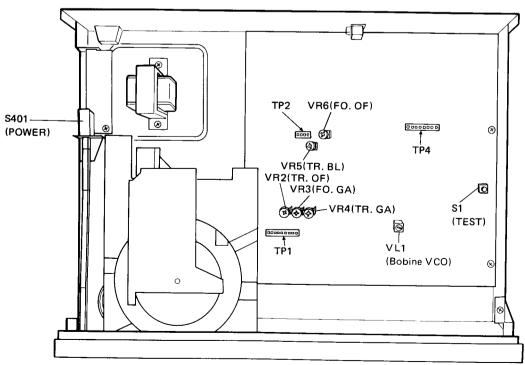


Fig. 11-1 Points de réglage

Au cours du mode d'essai, chaque mécanisme d'asservissement peut être fermé ou ouvert à travers des opérations différentes. Par conséquent, chaque mécanisme d'asservissement doit être fermé un à la fois (en séquence de série) pour régler le mode de reproduction. Il faudrait remarquer que le mode de reproduction n'est pas mis en fonction en pressant tout simplement la touche de PAUSE ([]]) au cours du mode d'essai.

Exemple: Commuter du mode d'arrêt au mode de reproduction.

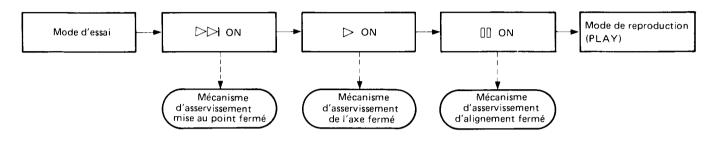


 Les mécanismes d'asservissement fonctionnent conformément à la séquence de série au cours du mode d'essai.

• Fonctions des touchs en mode d'essai

Symbole	Touche	Fonction durant le mode d'essai	Description
K	TRACK FWD (Alignement en avant)	Mécanisme asservissement fermé	La diode laser s'allume, l'actionneur de mise au point se déplace vers le haut/le bas, et le mécanisme d'asservissement de mise au point se ferme.
\triangleright	PLAY (Reproduction)	Mécanisme d'asservissement fermé	Mécanisme d'asservissement fermé en mode CLV-A après avoir démarré de moteur de l'axe.
00	PAUSE	Mécanisme d'asservissement d'alignement fermé/ouvert	Le mécanisme d'asservissement se ferme en pressant le tumbler et le lecteur est commuté en mode de reproduction (avec les mécanismes d'asservissement de mise au point et de l'axe fermés). Le voyant PAUSE s'allume et le mécanisme d'asservissement est ouvert en pressant une deuxième fois.
$\triangleleft \triangleleft$	MANUAL SEARCH REV (Recherche manuelle en marche arrière)	Marche arrière du chariot (vers le centre du disque	Le chariot est déplacé vers le centre du disque à une vitesse élevée d'environ 1 cm/seconde. Comme il n'y a aucun mécanisme de sécurité pour arrêter le chariot, ne pas le déplacer trop loin.
DD .	MANUAL SEARCH FWD (Recherche manuelle en avant)	Marche avant du chariot (vers le bord du disque)	Le chariot se déplace vers le bord du disque à une vitesse élevée d'environ 1 cm/seconde. Comme il n'y a aucun mécanisme de sécurité pour arrêter le chariot, ne pas le déplacer trop loin.
	REPEAT (Répétition)	L'objectif se déplace vers le haut/le bas.	La diode laser s'allume, et l'actionneur de mise au point est déplacé vers le haut/vers le bas. Le mécanisme d'asservisse- ment de mise au point n'est pas fermé.
	STOP (Arrêt)	Arrêt	Tous les mécanisme d'asservissement sont arrêtés et réenclenchés à l'état d'origine.
\triangle	OUVERT/FERME	(Plateau de disque)	Le plateau de disque est ouvert/fermé. Il faudrait remarquer que le pick-up ne retourne pas sur le support du bras de pick-up quand le plateau est ouvert, et reste sur la même position lorsque le plateau est fermé.

Tableau 11-1

No. d'éta-	Positio	on de oscope	Points	Positions	Items de contrôle/	Procédure de réglage
pe	V	н	d'essai	de réglage	de réglage	Procedure de regiage
1	REGI	LAGES	DE DECA	LAGE D'A	LIGNEMENT E	T DE MISE AU POINT
						Régler le lecteur en mode d'essai (se référer à la page 64).
			TP1 Broche 3 (FO.ER)	VR 2 (TR. OF)	0V ± 10mV	 Régler la tension sur TP1 Broche 9 TR.RT (retour d'alignement) à une valeur de 0 V ± 10 mV en tournant la commande de VR2 TR.OF (décalage d'alignement).
			TP1 Broche 9 (TR.RT)	VR 6 (FO.OF)	0V ± 10mV	Régler la tension sur TP1 Broche 3 FO.ER (erreur de mise au point) sur une valeur de 0 V ± 10 mV en tournant la commande de VR6 FO.OF (décalage de mise au point).
2	VERI	FICAT	ION DE L	A PUISSAN	NCE DU LD (DIC	DDE AU LASER)
						 Régler en mode d'essai. (Le mode normal peut être réglé en mettant l'interrupteur d'alimentation en et hors service).
				VR 1	Valeur nominale spécifiée	Placer le senseur de compteur de puissance optique juste au-dessus de l'objectif.
						 Presser la touche de reproduction PLAY sans charger de disque et vérifier si la valeur indiquée de puissance de la LD (diode au laser) du compteur de puissance optique se trouve dans les limites spécifiées (0,26 mW ± 0.02 mW).
3	VER	FICATI	IONE DEV	/F D D O J J J	LAGE DE MIGE	
3	VENI	FICATI	IONS DE	ZERROUIL	LAGE DE MISE	AU POINT ET DE L'AXE
;						Charger le disque d'essai.
						 Régler le lecteur en mode d'essai (se référer à la page 64). Presser la touche MANUAL SEARCH FWD pour déplacer
						le pick-up à proximité du centre du disque. Il faudrait noter que cette étape devrait être exécutée.
	V 0,5 V/div.	H 100ms/ div.	TP2 Broche 4 (sortie RF)		Sortie RF générée	Observer TP2 Broche 4 RF (sortie RF) au moyen de l'oscilloscope pour vérifier si un signal de sortie RF est généré lorsque la touche TRACK FWD (▷▷) est pressée.
					Rotation normale	 Presser la touche PLAY (>) et vérifier si le disque tourne à une vitesse normale (environ 300 tours/minute à proximité du centre du disque) dans la direction correcte (dans le sens des aiguilles d'une montre).

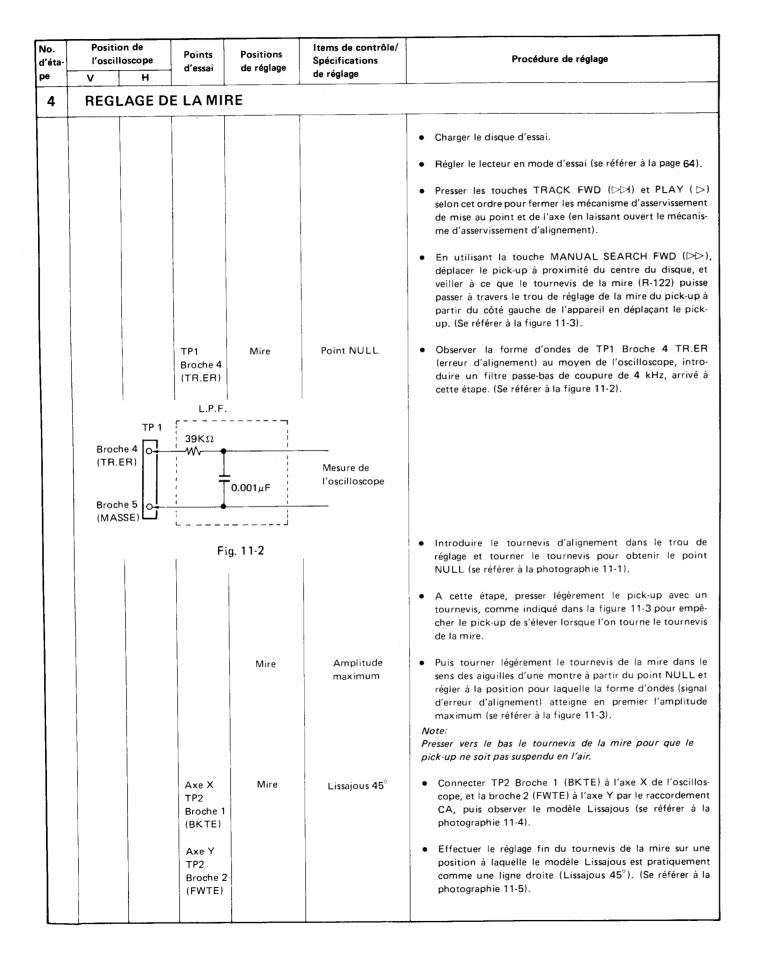



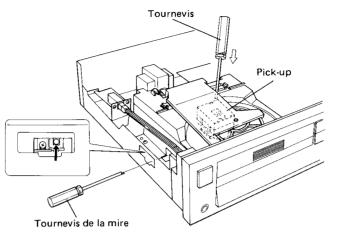



Fig 11-3 Réglage de la mire

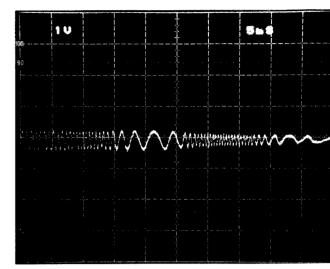


Photographie 11-1 Point NULL

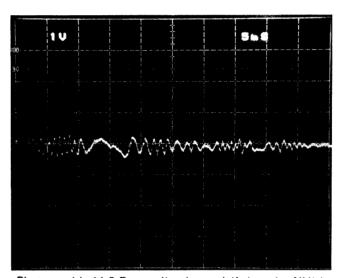


Photographie 11-2 Forme d'ondes au-delà du point NULL

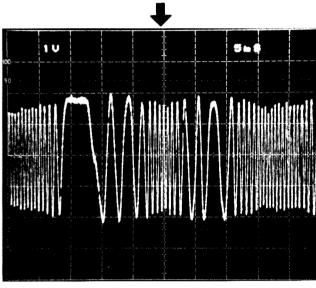

Photographie 11-3 Amplitude maximum

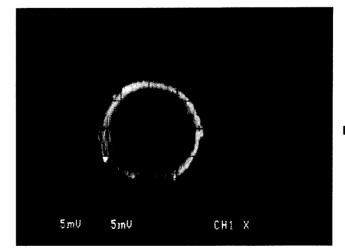

Photographie 11-4

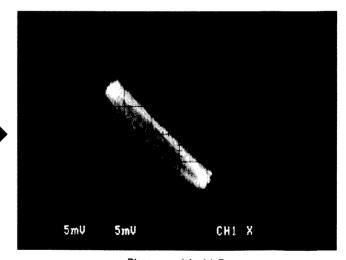

Photographie 11-5



FREGLAGE DE L'EQUILIBRE D'ALIGNEMENT Charger le disque d'essai. Régler le lecteur en mode d'essai (se référer à le disque et chariot à une position à proxim du disque en utilisant la touche MANUALS (▷▷). Presser la touche TRACK FWD (▷▷), pi PLAY (▷) pour faire tourner le disque. Observer TP1 Broche 4 TR.ER (erreur d'alig l'oscilloscope, et éliminer la composante C d'alignement en réglant la commande VR5 libre d'alignement).		Procédure de réglage	Items de contrôle/ Spécifications	Posotions de réglage	Points d'essai	ion de Hoscope	l'osci	No. d'éta-
Charger le disque d'essai. Régler le lecteur en mode d'essai (se référer à Déplacer le chariot à une position à proxim du disque en utilisant la touche MANUAL S (▷▷). Presser la touche TRACK FWD (▷▷), pre PLAY (▷) pour faire tourner le disque. Observer TP1 Broche 4 TR.ER (erreur d'alig l'oscilloscope, et éliminer la composante C d'alignement en réglant la commande VRS libre d'alignement).			L			I		
 Régler le lecteur en mode d'essai (se référer à Déplacer le chariot à une position à proxim du disque en utilisant la touche MANUAL S (▷▷). Presser la touche TRACK FWD (▷▷), pre PLAY (▷) pour faire tourner le disque. Observer TP1 Broche 4 TR.ER (erreur d'alignement en réglant la commande VR5 libre d'alignement). 			ALIGNEMENT	ILIBRE D'A	E L'EQU	LAGE D	REG	5
Photographie 11-6 Composantes CC co	mité du centre SEARCH FWD puis la touche ignement) dans CC de l'erreur 5 TR.BL (équi-	 Charger le disque d'essai. Régler le lecteur en mode d'essai (se référer à la page de la la page de la page de la proximité de du disque en utilisant la touche MANUAL SEARG (▷▷). Presser la touche TRACK FWD (▷▷), puis la PLAY (▷) pour faire tourner le disque. Observer TP1 Broche 4 TR.ER (erreur d'aligneme l'oscilloscope, et éliminer la composante CC de d'alignement en réglant la commande VR5 TR.B libre d'alignement). 	L	VR 5	E L'EQU	LAGE D	REG	

Photographie 11-6 Composantes CC comprises

TP

Broche 4

(RF)

Photographie 11-7 Composantes CC exclues

l'oscillosco	pe Points d'essai	Positions de réglage	Items de contrôle/ Spécifications	Procédure de réglage
v !		uc regiuge	de réglage	
REGLAC	GE TANGEN	ITIEL		
	TP2 Broche 4 (sortie RF)	Vis de réglage tangentiel	Meilleur modèle de vue	 Charger le disque d'essai. Régler le lecteur en mode d'essai (se référer à la page 64). Déplacer le pick-up au bord du disque, en utilisant la touche MANUAL SEARCH FWD (▷), pour pouvoir observer la vis de réglage tangentiel à partir du côté gauche (se référer à la figure 11-5). Presser les touches TRACK FWD (▷▷), PLAY (▷) et PAUSE (□□) selon cer ordre, pour fermer tous les mécanismes d'asservissement. (Dans ce cas le voyant PAUSE s'allumera). Observer TP2 Broche 4 RF (sortie RF) dans l'oscilloscope et régler la vis de réglage tangentielle pour obtenir le modèle de vue le plus net. (Se référer à la figure 11-5). La position optimale est un point intermédiaire entre les deux positions pour lesquelles le modèle de vue commence à se détériorer lorsque l'on tourne la vis de réglage dans le sens des aiguilles d'une montre et dans le sens contraire. Conseils pour ce réglage: Outre une forme d'ondes d'ensemble claire, régler pour obtenir des lignes relativements fines (se référer à la photographie 11-8), sur lesquelles des formes en "diamant" simple sont observées dans le modèle de vue. Pour faciliter l'observation de la forme d'ondes, introduire une résistance de 10 Kohms (ou 5 Kohms s'îl est difficile d'observer la forme d'ondes) dans le bout de la sonde comme indiqué par la figure 11-4. Fig. 11-4
		TP2 Broche 4 (sortie	REGLAGE TANGENTIEL TP2 Broche 4 (sortie) Vis de réglage tangentiel	TP2 Broche 4 (sortie) Teglage de réglage de réglage de réglage Meilleur modèle de vue



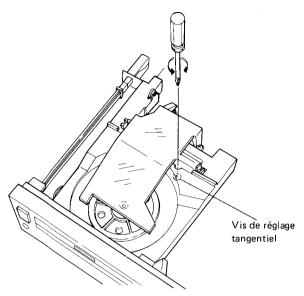


Fig.11-5 Réglage tangentiel

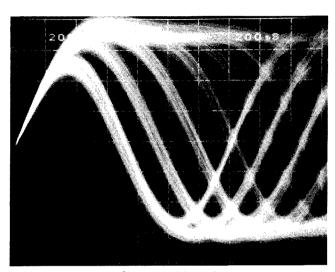


Photographie 11-9

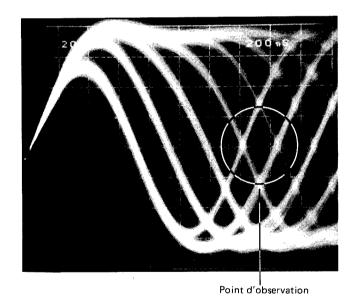


Non aligné Réglage optimal



Photographie 11-8

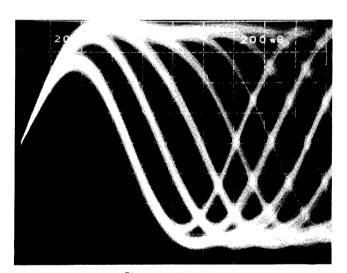

Photographie 11-10

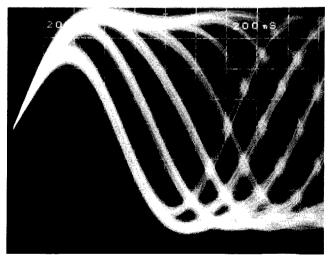

Photographie 11-11

No. d'éta-	Positio l'oscille		Points	Positions	Items de contrôle/ Spécifications	Procédure de réglage
ре	V	н	d'essai	de réglage	de réglage	
7	REGL	AGE D	U GAIN	DE MISE A	U POINT	
						 Régler le lecteur en mode d'essai (se référer à la page 64).
						 Presser la touche STOP (□) pour arrêter tous les mécanismes d'asservissement.
						 Régler la fréquence er la tension de sortie de CH1 du dispositif de réglage F.T.G. sur 875 Hz et 0,2 Vc-c.
						Note: Si l'on règle la tension de sortie au moyen de l'oscilloscope, débrancher le câble de la plaquette de circuit du dispositif de réglage F.T.G., et mesurer et régler au moyen de la sonde de l'oscilloscope en contact direct avec la broche 3 du connecteur N1 (fiche). (Ne pas mesurer au bout du câble, à cause du bruit génére). câble, à cause du bruit génér]
						câble, à cause du bruit généré). , câble, à cause du bruit généré). ,
				i		 Connecter le dispositif de réglage F.T.G. comme indiqué par la figure 11-6.
						 Presser les touches TRACK FWD (▷▷), PLAY (▷) et PAUSE (□□) selon cet ordre, pour mettre en route tous les mécanismes d'asservissement.
			TP1 Broche 6 (FO.IN)	VR 3 (FO. GA)	DEL (vert) allumée	 Régler la commande VR3 FO.GA (gain de mise au point) du lecteur de disque compact, de telle manière que la DEL (verte) du dispositif de réglage F.T.G. s'allume.
			TP1 Broche 1 (FO.OT)			LECTEUR DE DISQUE COMPACT
						Broche 6 FIL ORANGE Dispositif de
						(FO.IN) Broche 1 (FO.OT) FIL MARRON réglage F.T.G.
						Broche 5 FIL NOIR (R-878)
						Fig. 11-6
		_				Photographie 11-12 Dispositif de réglage F.T.G.

No. d'éta-	Position de l'oscilloscope	Points d'essai	Positions	Items de contrôle/ Spécifications	Procédure de réglage
pe	V H	d essai	de réglage	de réglage	
8	REGLAGE D	E GAIN	D'ALIGNE!	MENT	
8	REGLAGE D	TP1 Broche 7 (TR.IN) TP1 Broche 2 (TR.OT)	VR 4 (TR. GA)	DEL (verte) allumée	 Régler le lecteur en mode d'essai (se référer à la page 64). Presser la touche STOP (□) pour arrêter tous les Régler la fréquence et la tension de sortie du CH2 du dispositif de réglage F.T.G. sur 1125 Hz et 0,4 Vc-c. Note: Si l'on règle la tension de sortie au moyen de l'oscilloscope, débrancher le câble de la plaquette de circuit du dispositif de réglage F.T.G., et mesurer et régler au moyen de la sonde de l'oscilloscope en contact direct avec la broche 4 du connecteur N1 (fiche). (Ne pas mesurer au bout du câble, à cause du bruit généré). Connecter le dispositif de réglage F.T.G. comme indiqué par la figure 11-7. Presser les touches TRACK FWD (▷內), PLAY (▷) et PAUSE (□□) selon cet ordre, pour mettre en route tous les mécanismes d'asservissement. Régler la commande de VR4 TR.GA (gain d'alignement) du lecteur de disque compact de telle manière que la DEL (verte) du dispositif de réglage s'allume. LECTEUR DE DISQUE COMPACT TP 1 Broche 7 (TR.IN) Broche 2 (TR.OT) Broche 5 (MASSE)

No. d'éta pe	Position l'oscillose V		Points d'essai	Positions de réglage	Items de contrôle/ Spécifications de réglage	Procédure de réglage
9	REGLA	AGE DE	LAFR	EQUENCE	DE FONCTION	NEMENT LIBRE VCO
9	0,5 V/div.		IC 8 (2/2) Broche 8	Bobine VL1 (VCO)	Ecrire la valeur intermédiaire de la forme d'ondes.	 Régler le lecteur en mode d'essai (se référer à la page 64). Presser la touche STOP (□) pour arrêter tous les mécanismes d'asservissement. Presser les touches TRACK FWD (▷) et PLAY (▷), selon cet ordre, pour fermer les mécanismes d'asservissement de mise au point et de l'axe. Observer la forme d'ondes à la broche 8 du IC8 (2/2) au moyen de l'oscilloscope dans ce cas. (V:0,5 V/div.). (Bien que C47, R83, R87, et les autres éléments de circuit soient connectés à la broche 8, la forme d'ondes peut s'observer facilement à partir des bouts du C47. Ecrire la valeur intermédiaire de la forme d'ondes à la broche 8 de IC8 (2/2). En utilisant le driver de noyau, régler le noyau VL1 (bobine VCO) de telle manière que la valeur intermédiaire de la forme d'ondes de l'oscilloscope soit identique à la valeur enregistrée précédemment lorsque la touche PAUSE (□□) a été pressée pour mettre en route les mécanismes d'asservissement d'alignement.

11. AJUSTE

Los ajustes del Tocadiscos Compacto se ejecutan en el siguiente orden:

• Items de Ajuste

- 1. Ajustes de desalineación y desenfoque.
- 2. Verificación de energía del LD (diodo láser)
- 3. Verificación del seguro del foco y del seguro del eje
- 4. Ajuste de la mira
- 5. Ajuste de equilibrio de alineación
- 6. Ajuste tangencial
- 7. Ajuste de ganancia de foco
- 8. Ajuste de ganancia de alineación
- 9. Ajuste de frequencia de operación libre VCO

• Equipo de Medición

- 1. Osciloscopio de alineación dual
- 2. Medidor de energía óptico
- 3. Disco de prueba (YEDS7)
- 4. Filtros de ajuste de foco y alineación
- 5. Filtro de paso de banda para ajuste de ganancia de bucle
- 6. Generador de señales
- 7. Colocador de mira
- 8. Otros equipos de medición de uso común

Mode de prueba

Los ajustes del tocadiscos se llevan a cabo en el modo de prueba.

Procedimientos de colocación y cancelación del modo deprueba

- (1) Encender el conmutador POWER (ENER-GIA) (S401) mientras se presiona el conmutador TEST MODE (MODO DE PRUEBA) (S1).
- (2) Luego, encender el conmutador MANUAL SEARCH FWD (BUSQUEDA MANUAL HACIA ADELANTE) (▷▷) o el conmutador REV (REVERSA)(⟨⟨⟨⟨⟩|) para activar el modo de prueba.
- (3) El modo de prueba se cancela colocando el conmutador POWER en la posición apagado.

En la Tabla 11.1 se listan las variadas funciones de tecla.

Controles de ajuste

VR2: Desalineación (TR. OF) VR3: Ganacia de foco (FO. GA)

VR3: Ganacia de foco (FO. GA)
VR4: Ganacia de alineación (TR. GA)

VR5: Equilibrio de alineación (TR. BL)

VR6: Desenfoque (FO. OF)

VL1: Operación libre de la VOC (bobina

VOC)


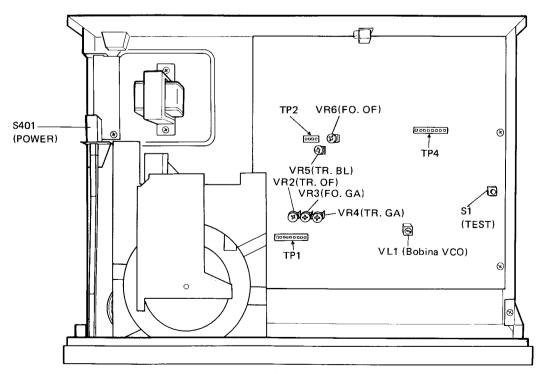


Fig. 11-1 Puntos de ajuste

Durante el modo de prueba cada mecanismo servo puede ser abierto o cerrado mediante operaciones separadas. En consecuencia cada servo debe ser cerrado, de a uno a la vez (en secuencia serial) para regular el modo tocar. Notar que el modo tocar no se activa por la simple presión de la tecla PAUSE (PAUSA) ([[]]) durante el modo de prueba.

Ejemplo: Cambiar desde el modo detenido al modo tocar.

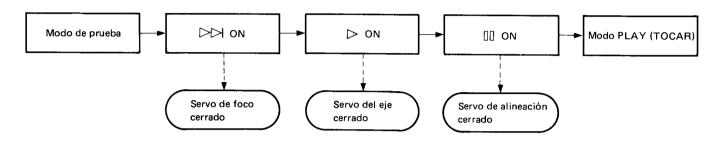

 Los mecanismos servo complen con un secuencia serial durante el modo de prueba.

• Funciones de teclas en el modo de prueba

Símbolo	Tecla	Función durante el modo de prueba	Descripción
KK	TRACK FWD (ALINEACION HACIA ADELANTE)	El servo del foco se cierra.	El diodo láser se enciende, el accionador del foco se mueve hacia arriba/abajo, y el servo del foco se cierra.
Δ	PLAY (TOCAR)	El servo del eje se cierra.	El servo del eje se cierra en el modo CLV-A después que el motor de la aguja es arrancado.
00	PAUSE (PAUSA)	Servo de alineación cerrado/abierto.	El servo de alineación se cierra presionandolo por palanca, y el tocadiscos es puesto en el modo tocar (con los servos de foco y eje cerrados). El indicador PAUSE se enciende y el servo de alineación se abre al presionarlo por segunda vez.
$\triangleleft \triangleleft$	MANUAL SEARCH REV (BUSQUE MANUAL EN REVERSA)	El carro se devuelve (hacia el centro del disco).	El carro se mueve hacia el centrol del disco a una velocidad rápida de aproximadamente 1 cm/seg. Como no existe mecanismo de seguridad para detener el carro, cuidese de no moverlo demasiado hacia el centro.
	MANUAL SEARCH FWD (BUSQUEDA MANUAL HACIA ADELANTE)	El carro se mueve hacia adelante (hacia el borde del disco).	El carro se mueve hacia el borde del disco a una velocidad rápida de aproximadamente 1 cm/seg. Como no existe mecanismo de seguridad para detener el carro, cuidese de no moverlo demasiado hacia el centro.
	REPEAT (REPETIR)	El lente se mueve hacia arriba/abajo.	El diodo láser se enciende y el accionador del foco se mueve hacia arriba/abajo. No se cierra el cervo del foco.
	STOP (PARAR)	Parar.	Todos los servos se detienen y se recolocan en su estado inicial.
	CERRADO/ABIERTO	(Bandeja de discos) abierta/cerrada.	La bandeja de discos está abierta/cerrada. Notar que el brazo de fonocaptor no regresa al soporte del brazo cuando la bandeja se abre, y permanece en la misma posición al cerrar la bandeja.

Tabla 11-1

No. de paso	Posición del osciloscopio	Puntos de chequeo	Posiciones de ajuste	Items de verificación/ Especificaciones de ajuste	Procedimiento de ajuste
1	AJUSTES DE	DESAL	INEACION	Y DESENFOQUI	E
		TP1 Pasador 9 (TR.RT) TP 1 Pasador 3 (FO.ER)	VR 2 (TR. OF) VR 6 (FO.OF)	0V ± 10mV 0V ± 10mV	 Poner el tocadiscos en el modo de prueba (véase la página 75). Ajustar la tensión en el TP1 pasador 9 TR.RT (retorno de alineación) en 0 V ± 10 mV girando el control VR2 TR.OF (desalineación). Colocar el medidor de energía óptica directamente sobre el objetivo y verificar que la energía LD satisface las condiciones nominales especificadas.
2	VERIFICAC	ION DE I	ENERGIA L	.D (DIODO LASE	ER)
			VR 1	Condiciones nominales especificadas (0.26mW ± 0.02mW)	 Ajustar en el modo de prueba. (El modo normal puede ser ajustado conmutando el conmutador de alimentación en la posición de apagado y encendido). Colocar el sensor del medidor de energía óptica directamente sobre el objetivo. Presionar la tecla del modo de tocar PLAY sin cargar el disco y verificar si el valor de energía del LD (diodo láser) indicado por el medidor de energía óptica está entre los limites especificados (0,26 mW ± 0,02 mW).
3	VERIFICAC	ION DEL	. SEGURO I	DEL FOCO Y DE	L FOCO DE LA AGUJA
	V 0.5V/div. 100 mseg div	TF2 / pasador 4 (salida RF)		Salida RF generada Rotación normal	 Cargar el disco de prueba. Colocar el tocadiscos en el modo de prueba (véase la página 75). Presionar la tecla MANUAL SEARCH FWD para mover el fonocaptor a aproximadamente el centro del disco. Nótese que este paso debe ser ejecutado. Observar TP2 pasador 4 RF (salida RF) mediante el osciloscopio para verificar si se genera una señal de salida RF cuando se presiona tecla TRACK FWD (▷□). Presionar la tecla PLAY (▷) y verificar que el disco gira a velocidad normal (aproximadamente 300 rpm cerca del centro del disco) en la dirección correcta (en el sentido de los punteros del reloj).

No. de	Posición del osciloscopio	Puntos de	Posiciones de ajuste	Items de verificación/ Especificaciones	Procedimiento de ajuste
paso 4	AJUSTE DE	•	***************************************	de ajuste	
4	AJUSTEDE	LAWIRA	•		
					Cargar el disco de prueba Poner el tocadiscos en el modo de prueba (véase la página
					 Presionar las teclas TRACK FWD (▷▷) y PLAY (▷) para cerrar los servos del foco y del eje (dejando el servo de alineación abierto).
					 Usando la tecla MANUAL SEARCH FWD (▷▷) mover el fonocaptor a una posición cercana al centro del disco y verifique que el colocador de mira (R-122) puede entrar en el orificio de ajuste de la mira desde el lado izquierdo del equipo moviendo el fonocaptor. (Véase la Figura 11-3)
		TP 1 pasador 4 (TR,ER)	Mira	Posición NULL (NULA)	Observar que la forma de onda del TP1 pasador 4 TR.ER., mediante un osciloscopio. Insertar un filtro de paso bajo "de corte" en esta etapa. (Véase la Figura 11-2)
	TP 1	L.P.F.			
	Pasador 4	- 39KΩ			
	(TR,ER)	<u> </u>	0.001μF	Medición del osciloscopio	
	Pasador 5 (MASA)				
		Fi	g. 11-2		 Insertar el colocador de mira en el orificio de ajuste y girar el colocador hasta encontrar el punto NULL (Véase la fotografía 11-1)
					 En esta etapa vuelva a presionar gentílmente el fonocaptor con un destornillador, como se indica en la Fig. 11-3 par evitar que el fonocaptor se levanto cuando se gira el colocador de mira.
			Mira	Amplitud máxima	 A continuación gire lentamente el colocador de mira en el sentido de los punteros del reloj desde la posición NULL y ajuste la posición en que la forma de onda más alta (señal de error de alineación) primero alcanza la am- plitud máxima (Véase la Figura 11-3).
					Nota: Presionar hacia abajo el colocador de mira para asegurar que el fonocaptor no sea en suspensión en el aire.
		Eje X TP2 pasador 1 (SKTE)	Mira	Lissajous 45°	 Conectar el TP2 pasador 1 (BKTE) al eje X del oscilosco- pio, y el pasador 2 (FWTE) al eje Y mediante el acopla- miento CA y observar el patrón de Lissajous (véase la fotografia 11-4)
		Eje Y TP2 pasador 2 (FWTE)			 Efectuar el ajuste fino del colocador de mira a la posición en la cual el patrón Lissajous es prácticamente una línea derecha (Lissajous 45°). (Veáse la fotografía 11-5)




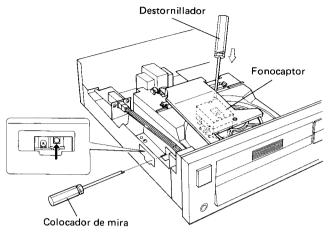


Fig. 11-3 Ajuste de mira

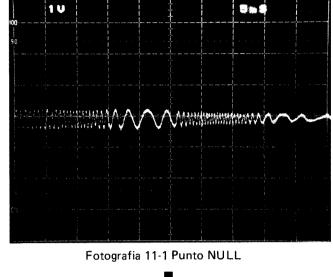


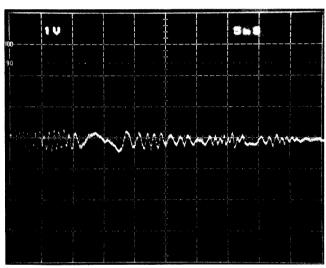


Fotografía 11-2 Forma de onda más allá del punto NULL

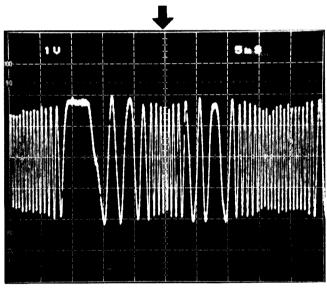

Fotografía 11-3 Amplitud máxima

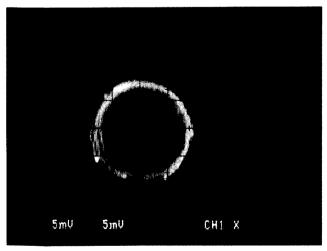

Fotografía 11-4

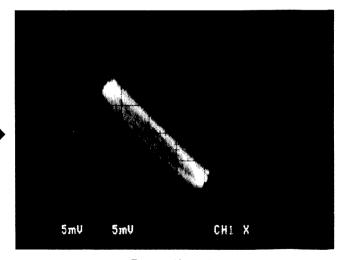

Fotografía 11-5

No. de	ľ	ión del scopio	Puntos de chequeo	Posiciones de ajuste	Items de verificación/ Especificaciones	Procedimiento de ajuste
paso	V	Н			de ajuste	
5	AJUS	TE DE	EQUILIB	RIO DE AL	INEACION	
	1 V/div.	5 mseg/ div.	TP1 pasador 4 (TR,ER)	VR 5 _. (TR,BL)		 Cargar el disco de prueba. Poner el tocadiscos en el modo de prueba (véase la página 75). Mueva el carro a una posición cerca del centro del disco usando la tecla MANUAL SEARCH FWD (▷▷). Presionar la tecla TRACK FWD (▷▷) y luego la tecla PLAY (▷) para que el disco comience a girar. Observar TP1 pasador 4 TR,ER (error de alineación) en el osciloscopio y eliminar el componente de C.C. del error de alineación ajustando el control VR5 TR.BL (equilibrio de alineación).
						Fotografía 11-6 Componentes de C.C. incluídos Fotografía 11-7 Componentes de C.C. excluídos

No. de	Posición d osciloscop	Puntos de	Posiciones de ajuste	Items de verificación/	Procedimiento de ajuste
paso	V	H	40 0,4010	de ajuste	
6	AJUST	TANGENCI	AL		
		TP2 pasador 4 (Salida RF)	Tornillo de ajuste tangencial	Mejor patrón de vista	 Cargar el disco de prueba. Colocar el tocadiscos en el mode de prueba (véase la página 75). Mover el fonocaptor al borde del disco usando la tecla MANUAL SEARCH FWD (▷), para permitir que el tornillo de ajuste tangential se vea desde el lado izquierdo (véase la Figura 11-5). Presionar las teclas TRACK FWD (▷), PLAY (▷) y PAUSE (□) para cerrar todos los servos. (Se encenderá el indicador de pausa.) Observar el TP2 pasador 4 RF (salida RF) en el osciloscopio, y ajustar mediante el tornillo de ajuste tangencial para obtener el patrón de vista más claro. (Fig. 11-5.) La posición óptima es el punto medio entra las dos posiciones donde el patrón de vista comienza a deteriorar-se cuando el tornillo de ajuste tangencial se gira en el sentido de los punteros de reloj y en el sentido contrario. Guías para el ajuste: Además de una formade onda general clara, se debe ajustar para obtener líneas relativamente finas (véase la fotografía 11-5), donde se observan formas de "diamante" simple en el patrón de vista. Para facilitar la observación de la forma de onda más fácil de observar, insertar una resistencia de 10 Kohm (o 5 Kohm si la forma de onda es difícil de distinguir) en la punta del probador, como se indica en la Figura 11-4.




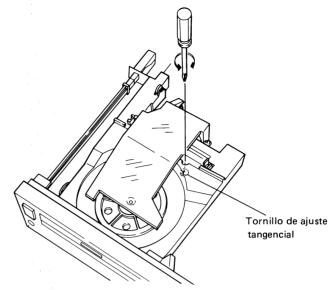


Fig. 11-5 Ajuste tangencial

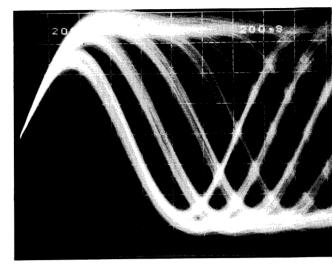


Fotografía 11-9

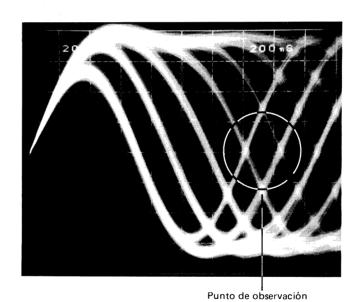

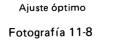


Desalineado

Desalineado

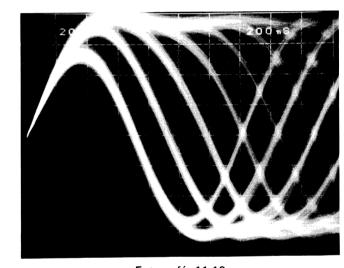

Fotografía 11-10

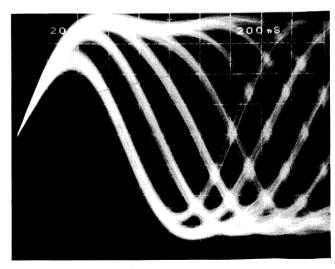

Fotografía 11-11



No. de	Posición del osciloscopio	Puntos de chequeo	Posiciones de ajuste	Items de verificación/ Especificaciones de ajuste	Procedimiento de ajuste
paso 7	AJUSTE D	E GANANO	CIA DE FO		
		TP 1 Pasador 6 (FO.IN) TP1 Pasador 1 (FO.OT)	VR 3 (FO. GA)	LED (verde) encendida	Poner el tocadiscos en el modo de prueba (véase la página 75). Presionar la tecla STOP (PARAR) (□) para apagar todos los servos. Ajustar la frecuencia y la tensión de salida del CHf del ajustador F.T.G. a 875 Hz y 0,2 V p.p. Nota: Si se ajusta la tensión de salida mediante un osciloscopio, desconectar el cables del tablero de circuito ajustador F.T.G., mida y ajuste el probador del osciloscopio en contacto directo con el pasador 3 del conector N1 (enchufe). (Debido a que el zumbido generado no se mide en la punta del cable.) Conectar el ajustador F.T.G. como se indica en la Figura 11-6. Presionar las teclas TRACK FWD (▷□), PLAY (▷) y PAUSE (□) en el orden para encender todos los servos. Ajustar el control VR3 FO.GA (ganancia de foco) del tocadiscos compacto para que el LED (verde) del ajustador F.T.G. sólo el LD (verde) se encienda. TOCADISCOS COMPACTOS Pasador 5 (FO,IN) Pasador 1 (FO. OT) Pasador 5 (MASA) TOCADISCOS COMPACTOS ALAMBRE MARRON Fig. 11-6 Fig. 11-6

No. de paso	Posició oscilos V	Puntos de chequeo	Posiciones de ajuste	Items de verificación/ Especificaciones de ajuste	Procedimiento de ajuste
8		 GANANO	IA DE ALII		
		TP 1 Pasador 7 (TR,IN) TP1 Pasador 2 (TR.OT)	VR 4 (TR. GA)	LED (verde) encendida	 Colocar el tocadiscos en el modo de prueba (véase página 75). Presionar la tecla STOP (□) para apagar todos los servos. Ajustar la frecuencia y la tensión de salida del CH2 del ajustador F.T.G. a 1125 Hz y 0.4 Vp.p. Nota: Si se ajusta la tensión de salida mediante un osciloscopio, desconectar el cable del tablero de circuito del ajustador F.T.G., meda y ajustar el probador del osciloscopio en contacto directo con el pasador 4 del conector N1 (enchufe). (Debido al zumbido generado, no efectúe mediciones en la punta del cable.) Conectar el ajustador F.T.G. como se indica en la Figura 11-7. Presionar las teclas TRACK FWD (▷□), PLAY (▷)y PAUSE (□) en el orden para encender todos los servos. Ajustar el control VR4 TR.GA (ganancia de alineación) del tocadiscos compacto de manera que en el ajustador F.T.G. sólo el LED (verde) se encienda. TOCADISCOS COMPACTOS (TR.IN) Pasador 7 (TR.IN) Pasador 5 (R-878)

No. de paso		ón del scopio	Puntos de chequeo	Posiciones de ajuste	Items de verificación/ Especificaciones de ajuste	Procedimiento de ajuste
9	AJUSTE DE FRECUENCIA DE OPERACION LIBRE VCO				RE VCO	
9			IC 8 (2/2) Pasador 8	Bobina VL 1 (VCO)		Colocar el tocadiscos en el modo de prueba (véase la página 75). Presionar la tecla STOP (□) para apagar todos los servos. Presionar las teclas TRACK FWD (▷▷) y PLAY (▷) en el orden para cerrar los servos de foco y del eje. Luego observar la forma de onda en el pasador 8 del IC 8 (2/2) mediante el osciloscopio (V: 0,8 V/div.) (Aunque C47, R83, R87, y otros elementos de circuito están conectados al pasador 8, la forma de onda puede ser observada fácilmente desde la punta de C47.) Escribir el valor medio de la forma de onda en el pasador 8 del IC 8 (2/2). Usando un colocador de núcleo, ajustar el núcleo VL1 (bobina VCO) de manera que el valor medio de la forma de onda del osciloscopio sea el mismo que el valor registrado previamiente cuando la tecla PAUSE (□□) fue presionada para encender el servo de alineación. Fig. 11-8

12. FOR KC, HEM and HB TYPES

Model PD-6010/KC, HEM and HB are the same as the PD-6010/KU with the exception of this supplement.

Contrast of Miscellaneous Parts

		Part No.				
Mark	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	PD-6010(BK)/KU PTT-233 PDG-046 CM-22 PKN-003 PHH-273	PD-6010(BK)/KC PTT-234 PDG-046 CM-22 PHH-273	PD-6010(BK)/HEM PTT-235 PDG-037 CM-22B PHH-274	PD-6010(BK)/HB PTT-235 PDG-062 CM-22B PHH-274	
<u>^</u>						
	Operating instructions (English) Operating instructions (English/German/French/Italian)	PRB-297 	PRB-297 	PRE-047	PRB-297 	

 The exterior components of PD-6010(BK)/HEM differ from PD-6010/HEM and PD-6010/HB as follows;

Mark	Symbol & Description	Part No.			
		PD-6010(BK)/HEM	PD-6010/HEM	PD-6010/HB	Remarks
	Front panel (D)	PAN-097	PAN-100	PAN-100	
	Function panel (D)	PNY-450	PNY-451	PNY-451	
	Knob cap (A) (PLAY)	PAC-236	PAC-235	PAC-235	
	Knob cap (A) (PAUSE)	PAC-238	PAC-237	PAC-237	
	Knob cap (STOP)	PAC-240	PAC-239	PAC-239	
	Knob cap (A) (TRACK)	PAC-242	PAC-241	PAC-241	
	Knob cap (B) (TRACK)	PAC-244	PAC-243	PAC-243	
	Knob cap (A) (MANUAL)	PAC-246	PAC-245	PAC-245	
	Knob cap (B) (MANUAL)	PAC-248	PAC-247	PAC-247	
	Knob cap (PROGRAM)	PAC-250	PAC-249	PAC-249	
	Button (REPEAT)	PAC-270	PAC-269	PAC-269	
	Button (OPEN/CLOSE)	PAC-252	PAC-251	PAC-251	
	Button (B) (POWER)	PAC-254	PAC-253	PAC-253	
	Bonnet	PNA-225	PNA-224	PNA-224	
	Packing case	PHH-274	PHH-275	PHH-275	
	Operating instructions (English)			PRB-297	
	Operating instructions	PRE-047	PRE-047		
	(English/German/French/Italian)				

Line Voltage Selection for HEM and HB Types

- 1. Disconnect the AC power cord.
- 2. Remove the bonnet case.
- 3. Change the connection of the power transformer primary lead wires as follows:


220V: Connect the blue lead wire to the TRANS 2 terminal on the primary board assembly and connect the violet lead wire to the TRANS 1 terminal.

240V: Connect the blue lead wire to the TRANS 1 terminal on the primary board assembly and connect the violet wire to the TRANS 2 terminal.

4. Stick the line voltage label on the rear panel.

_Description	Part No.		
220V label	AAX-193		
240V label	AAX-192		

• For KC Type

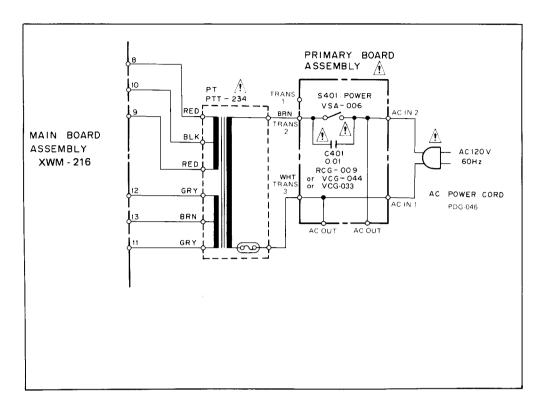

• For HEM and HB Types

